

2. Headlight and Tail Light System

S914415

A: INSPECTION


S914415A10

1. HEADLIGHT RELAY

S914415A1001

Check continuity between terminals when terminal No. 4 is connected to battery and terminal No. 3 is grounded.

When current flows.	Between terminals No. 1 and No. 2	Continuity exists.
When current does not flow.	Between terminals No. 1 and No. 2	Continuity does not exist.

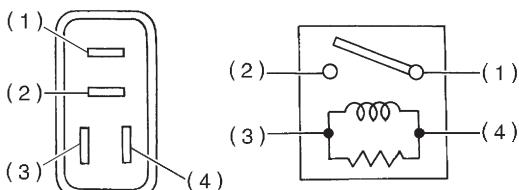


S6M0048A

2. TAIL AND ILLUMINATION RELAY

S914415A1002

Check continuity between terminals (indicated in table) when terminal No. 4 is connected to battery and terminal No. 3 is grounded.

When current flows.	Between terminals No. 1 and No. 2	Continuity exists.
When current does not flow.	Between terminals No. 1 and No. 2	Continuity does not exist.

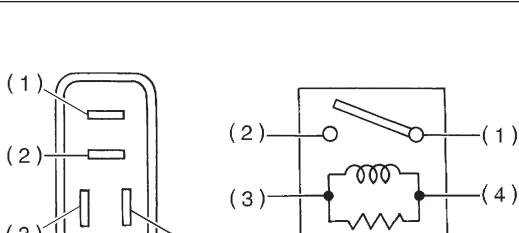

S6M0048A