


## 4. Headlight Assembly

S914409


### A: REMOVAL

S914409A18

- 1) Remove front grille and disconnect connector from headlight.
- 2) Remove screw then remove side marker light while disconnecting connector.

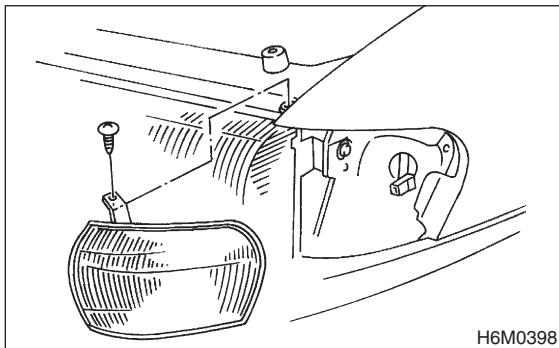

- 3) Remove screws and bolts which secure headlight and remove headlight.

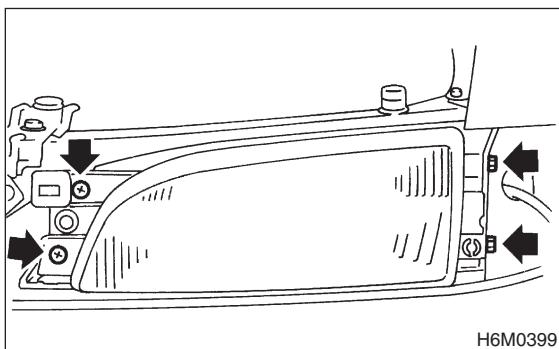

### B: INSTALLATION

S914409A11

Install in the reverse order of removal.

#### Tightening torque:

7.4 N·m (0.75 kgf·m, 5.4 ft-lb)

#### NOTE:

When installing, securely fit clip (on fender side) into locating (on side marker light side).

### C: ADJUSTMENT

S914409A01

#### 1. HEADLIGHT AIMING

S914409A0101

#### CAUTION:

Turn off the light before adjusting headlight aiming. If the light is necessary to check aiming, do not turn on for more than two minutes.

#### NOTE:

Before checking the headlight aiming, be sure of the following:


- The area around the headlight has not sustained any accident, damage or other type of deformation.
- Vehicle is parked on level ground.

- The inflation pressure of tires is correct.
- Vehicle's gas tank is fully charged.
- Bounce the vehicle several times to normalize the suspension.
- Make certain that someone is seated in the driver's seat.

- 1) Place a cloth over the headlight that does not require aiming adjustment.
- 2) Turn the headlights on. Perform the aiming adjustment for the other headlight as follows:

#### CAUTION:

Do not perform lateral headlight aiming adjustment.

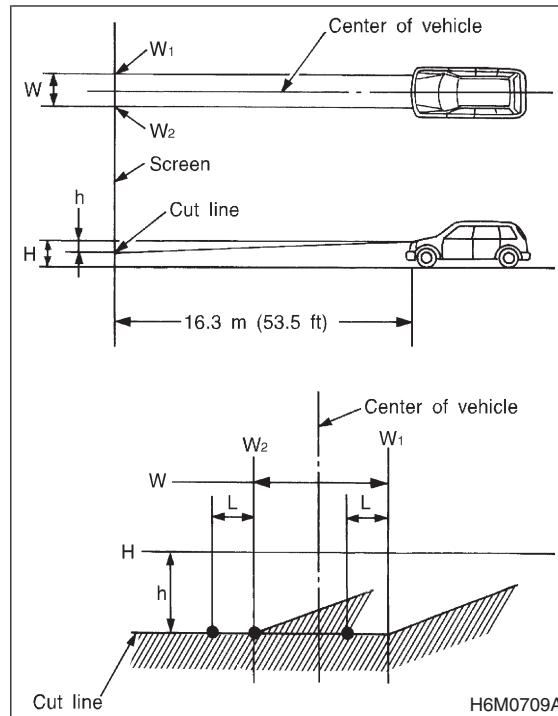

H6M0709A

	W	H	L	h
Except OUTBACK	1,070 mm (42.13 in)	630 mm (24.80 in)	712 mm (28.03 in)	114 mm (4.49 in)
OUTBACK	1,070 mm (42.13 in)	650 mm (25.59 in)	712 mm (28.03 in)	114 mm (4.49 in)