


5. Headlight Bulb S914410

A: REMOVAL S914410A18


- 1) Disconnect the connector from inside of the engine compartment.
- 2) Remove rubber cap.
- 3) Remove the light bulb retaining spring to remove the bulb.

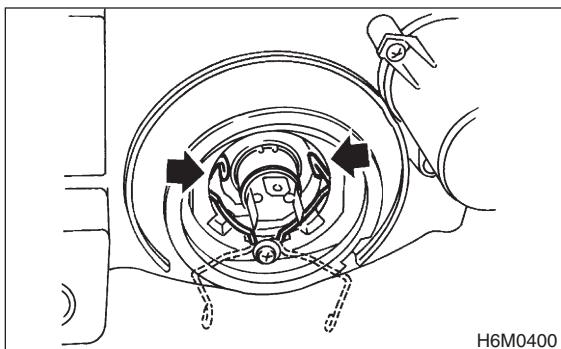


- 4) Replace the bulb with a new one and hook the spring.
- 5) Attach the rubber cap and connect the connector.

CAUTION:

- Since the tungsten halogen bulb operates at high temperature, dirt and oil on the bulb surface decreases the bulb's useful life. When replacing the bulb, hold the flange portion and do not touch the glass portion.

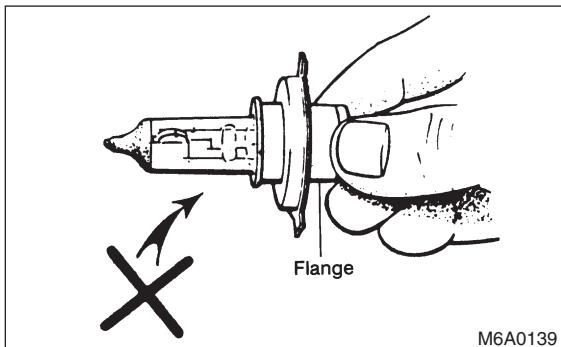

- Attach the rubber cap with letters TOP on the top so that the drain hole will be on the lower side.

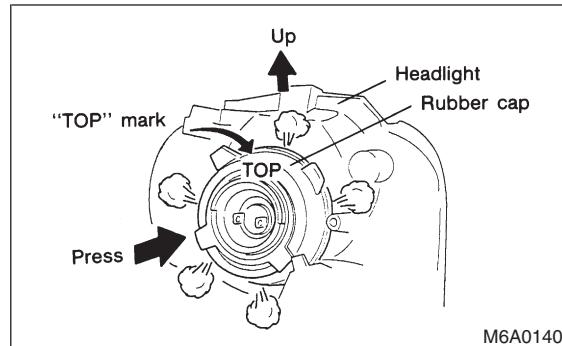

- To keep water out, correctly engage the groove portion of the rubber cap.

B: INSTALLATION S914410A11

Install in the reverse order of removal.