


7. Rear Combination Light Assembly

A: REMOVAL

S914426A18

- 1) Remove rear trim.
- 2) Remove nuts and disconnect connector.

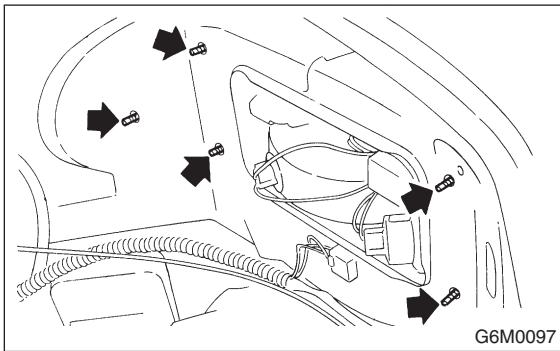

- 3) Attach adhesive cloth tape to body area around rear combination light.
- 4) Using a standard screwdriver, carefully pry rear combination light off and away from the front of vehicle.

B: INSTALLATION

S914426A11

Install in the reverse order of removal.

Tightening torque:

4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

CAUTION:

- Do not pry rear combination light forcefully as this may scratch vehicle body.
- Remove all traces of adhesive tape from body before installation.
- Attach butyl rubber tape to back of rear combination light before installing rear combination light on body for sealing purposes.