


4. Door Latch Assembly

S909605


A: REMOVAL

S909605A18

- 1) Remove trim panel.
- 2) Remove inner remote assembly.
- 3) Remove sealing cover around latch service hole.
- 4) Completely close door glass.
- 5) Remove latch and actuator assembly:
 - (1) Turn rod holder to disconnect joint between key lock and rod.
 - (2) Turn rod holder to disconnect joint between outer handle and rod.
 - (3) Turn rod holder to disconnect joint between crank and rod.

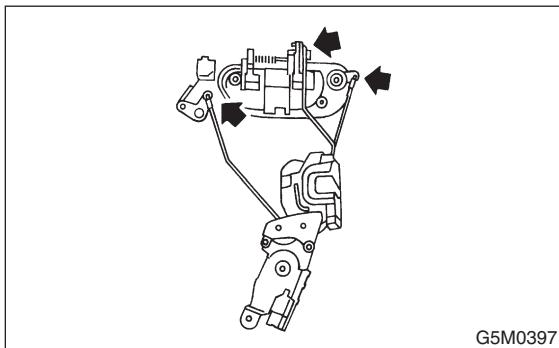

- 6) Loosen screws securing both latch and actuator, then remove latch and actuator assembly through service hole in bottom.

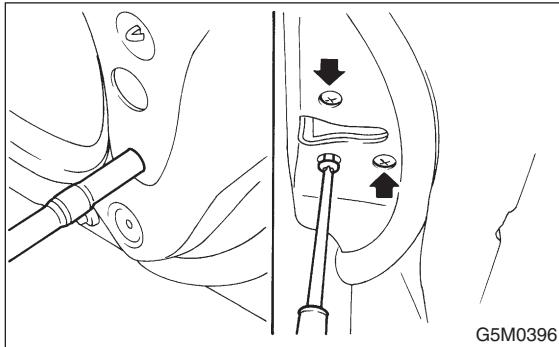

B: INSTALLATION

S909605A11

Install in the reverse order of removal.

Tightening torque (screw):

6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

NOTE:

- Check operation of each part.
- Check each sliding part for proper lubrication.

CAUTION:

After installation, be sure lock mechanism operates normally.

C: INSPECTION

S909605A10

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.