



9. Ignition Key Lock S909318

A: REPLACEMENT S909318A20

- 1) Remove screws, separate upper column cover and lower column cover.

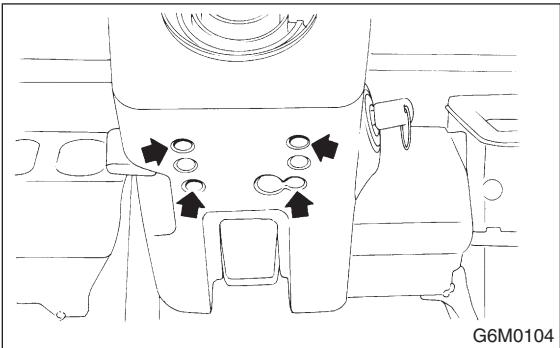

- 2) Remove knee protector.
- 3) Remove meter visor.
- 4) Disconnect ignition switch connector from body harness.
- 5) Using a drift and hammer, hit the torn bolt head to loosen and remove the ignition switch.

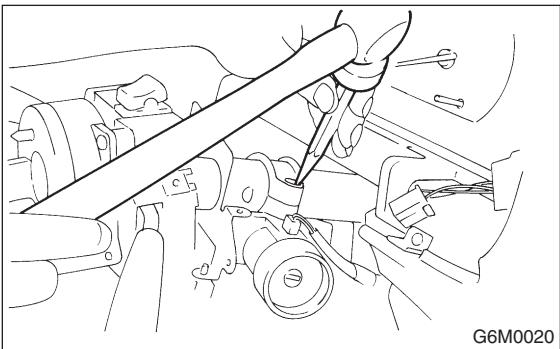

- 6) When installing, tighten the connecting bolt until its head twists off.

