


2. Inner Remote

S909603


A: REMOVAL

S909603A18

- 1) Remove trim panel.
- 2) Remove sealing cover.
- 3) Disconnect joints of two rods.

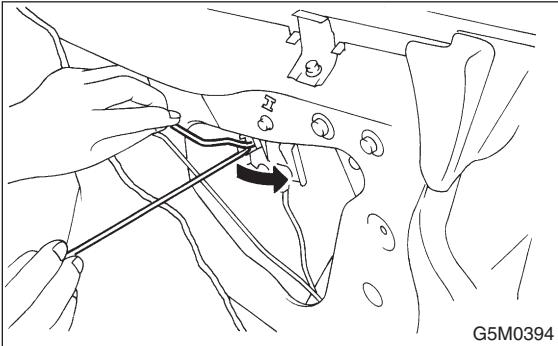

- 4) Unlatch rod holder.
- 5) Remove screws holding remote assembly.

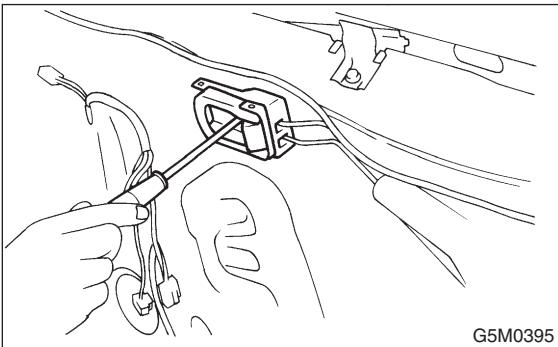

B: INSTALLATION

S909603A11

Install in the reverse order of removal.

NOTE:

If rear door is equipped with child safety lock, check that child lock lever moves without dragging.

C: INSPECTION

S909603A10

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.