

## 10. Key Lock Cylinders S909326

### A: REPLACEMENT S909326A20

#### 1. DOOR S909326A2004

- 1) Remove trim panel.
- 2) Remove sealing cover.
- 3) Completely close door glass.
- 4) Remove outer handle.
- 5) Loosen spring securing key lock.
- 6) Remove key lock from outer handle.

NOTE:

Install so that key slot in key lock comes to center of hole in outer handle.

#### 2. REAR GATE S909326A2003

- 1) Remove trim panel.
- 2) Disengage rod from holder.
- 3) Remove retaining spring from key cylinder, and detach key cylinder from outside..

# KEY LOCK CYLINDERS

Security and Locks

---

**MEMO:**