


3. Outer Handle S909604

A: REMOVAL S909604A18

- 1) Remove trim panel.
- 2) Remove sealing cover.
- 3) Detach door latch rod from outer handle and key lock.
- 4) Loosen nut securing outer handle and then remove outer handle from outside.

CAUTION:

Be careful not to damage door.

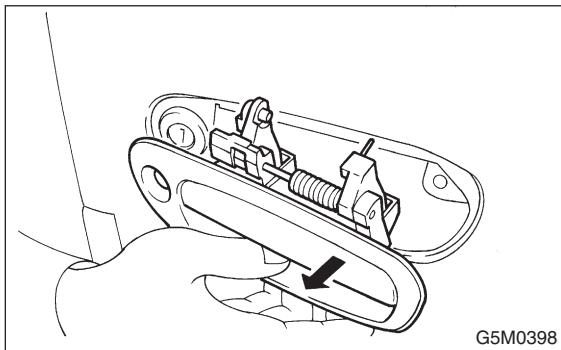

B: INSTALLATION S909604A11

Install in the reverse order of removal.

Tightening torque:

7.4 N·m (0.75 kgf·m, 5.4 ft-lb)

C: INSPECTION S909604A10

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.