


## 5. Rear Gate Latch Assembly

S909316

### A: REMOVAL S909316A18

- 1) Remove trim panel.
- 2) Disengage rod from holder (= key cylinder).
- 3) Remove bolts from auto-door lock actuator.
- 4) Remove bolts from latch, and detach latch.

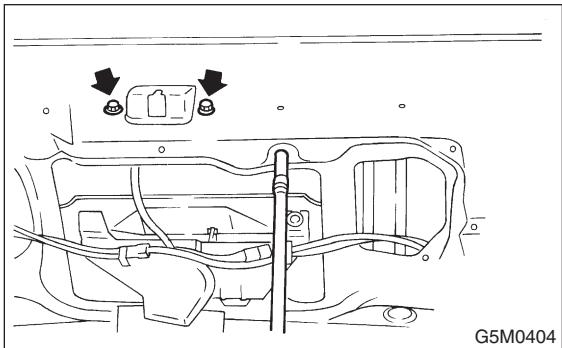

- 5) Disconnect rear gate switch connector.
- 6) Disconnect auto-door lock actuator connector.
- 7) Detach latch.

### B: INSTALLATION S909316A11

Install in the reverse order of removal.

#### CAUTION:

**Firmly join latch with key cylinder, and outer handle.**

### C: INSPECTION S909316A10

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.