


8. Remote Opener S909317

A: REMOVAL S909317A18

1. HOOD OPENER S909317A1801

- 1) Remove front grille.
- 2) Remove release cable from lock assembly.
- 3) Remove cable clip from engine compartment.
- 4) Remove bracket from front pillar.

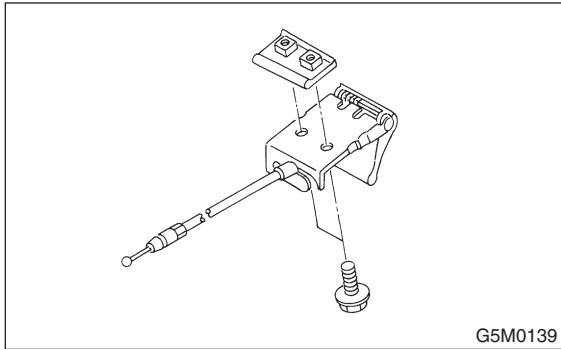


2. TRUNK LID OPENER S909317A1802

- 1) Remove driver's seat, rear seats, center pillar lower cover, floor mat, rear arch cover and side sill cover (on the driver's side).
- 2) Remove all clips which hold cable.
- 3) Disconnect cable from pull handle assembly.
- 4) Remove bolts and detach pull handle assembly.
- 5) Loosen bolts which hold lock assembly, and remove it.
- 6) Remove striker from trunk lid.
- 7) Disconnect cable from striker.

NOTE:


Be careful not to bend or break cable.

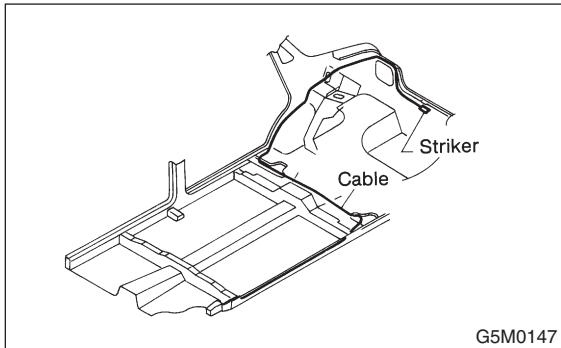

3. FUEL FLAP OPENER S909317A1803

- 1) Remove driver's seat, rear seats, center pillar lower cover, floor mat, rear arch cover/rear quarter trim (wagon), and side sill cover (on the driver's side).
- 2) Remove all clips which hold cable.
- 3) Disconnect cable from pull handle.

- 4) Detach pull handle by removing bolts.

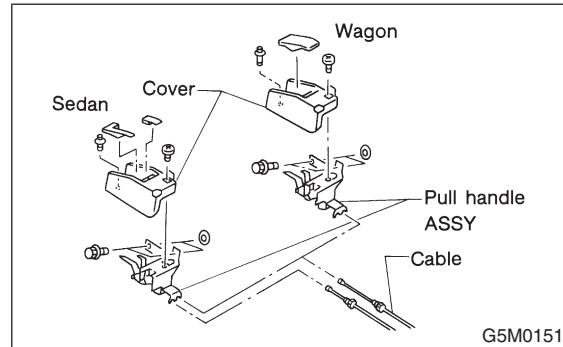

- 5) Detach fuel lock holder by turning it.

B: INSTALLATION S909317A11

1. HOOD OPENER S909317A1101

Install in the reverse order of removal.

2. TRUNK LID OPENER S909317A1102

Install in the reverse order of removal.

CAUTION:

- When installing cover to pull handle assembly, observe the following:
 - Be careful not to catch harness.
 - Engage pull handle assembly pawls firmly.

NOTE:

After installing opener cable, ensure it moves smoothly.

3. FUEL FLAP OPENER S909317A1103

Install in the reverse order of removal.

CAUTION:

- When installing cover to pull handle assembly, observe the following:
 - Be careful not to catch harness.
 - Engage pull handle assembly pawls firmly.
- After installing open cable, ensure it moves smoothly.

C: INSPECTION S909317A10

Make sure the fuel flap opens and closes smoothly.