


## 6. Trunk Lid Lock Assembly S909314

### A: REMOVAL S909314A18

- 1) Remove rod of lock assembly from rod holder of key lock assembly.
- 2) Remove bolts which hold lock assembly and remove lock assembly.

NOTE:

- Always remove rear skirt trim panel beforehand, if so equipped.
- Be careful not to bend opener cable.

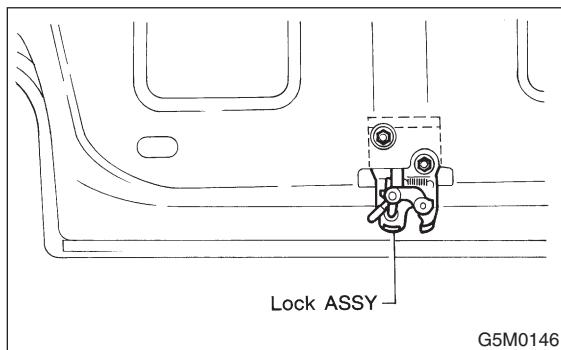


- 3) Remove clip and detach key cylinder from trunk lid.

### B: INSTALLATION S909314A11

Installin the reverse order of removal.

NOTE:

Apply grease to sliding surfaces of lock assembly and striker.

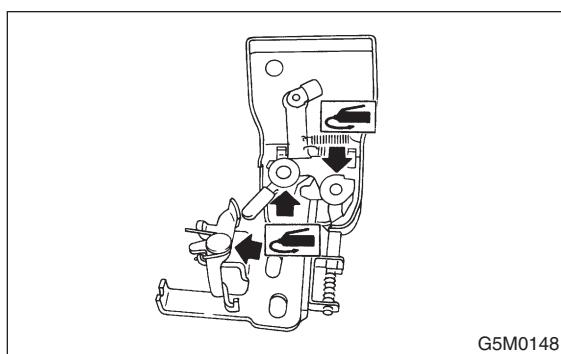

### C: INSPECTION S909314A10

- 1) Check the striker for bending or abnormal wear.
- 2) Check the safety lever for improper movement.
- 3) Check other levers and the spring for rust for mation and unsmooth movement.