


## 4. Sunroof Motor S910537A07

### A: REMOVAL S910537A18

- 1) Remove roof trim, rear quarter trim <Ref. to EI-30 REMOVAL, Rear Quarter Trim.>, pillar trim <Ref. to EI-29 REMOVAL, Upper Inner Trim.>, etc.
- 2) Remove screw.
- 3) Disconnect connector.

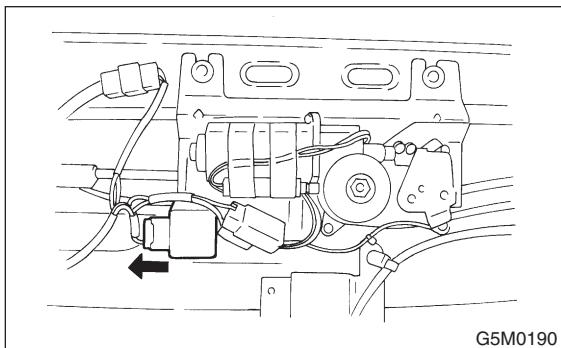

- 4) Remove relay by pulling it out.

### B: INSTALLATION S910537A11

Install in the reverse order of removal.