


FRONT WIPER ARM

Wiper and Washer Systems

4. Front Wiper Arm S902404

A: REMOVAL S902404A18

- 1) Open front hood.
- 2) Remove cap. Remove the nut which secure wiper arm, and remove wiper arm.

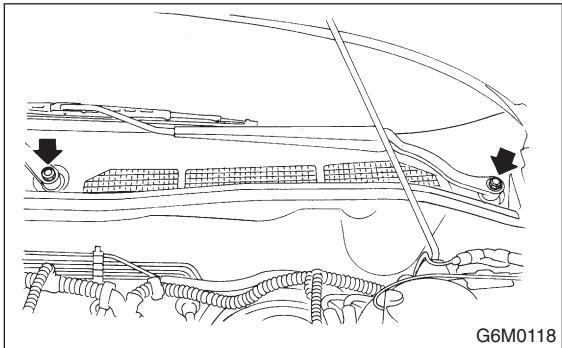

B: INSTALLATION S902404A11

Install in the reverse order of removal.

NOTE:

Remove metal sludge from the wiper arm fixture before installing it.

Tightening torque:

20 N·m (2.0 kgf·m, 14.4 ft-lb)

C: ADJUSTMENT S902404A01

- 1) Turn the wiper switch to OFF position.
- 2) Adjust blades in original position as shown in figure by changing wiper arm installation.

Original position:

A: 22.5 ± 7.5 mm (0.886 ± 0.295 in)

B: 32.5 ± 7.5 mm (1.280 ± 0.295 in)

