


9. Rear Washer S902400

A: REMOVAL S902400A18

- 1) Remove rear quarter trim.
- 2) Disconnect washer hose and connector.
- 3) Remove attaching bolts.

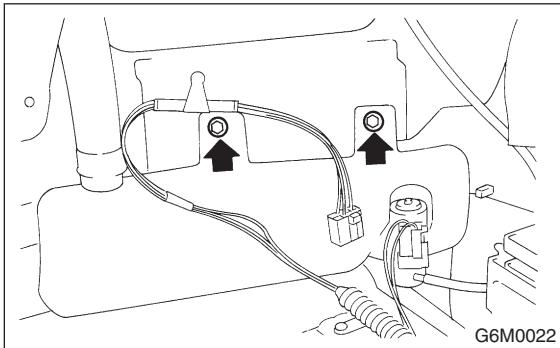

B: INSTALLATION S902400A11

Install in the reverse order of removal.

Tightening torque:

5.9 N·m (0.6 kgf·m, 4.3 ft-lb)

C: ADJUSTMENT S902400A01

Adjust washer ejecting point on rear gate window as shown in figure when the vehicle stops.

Ejecting point:

A: 25 mm (0.98 in)

B: 200 — 300 mm (7.87 — 11.81 in)

