


## 7. Rear Wiper Arm S902402

### A: REMOVAL S902402A18

- 1) Remove head cover.
- 2) Remove nut and wiper arm.

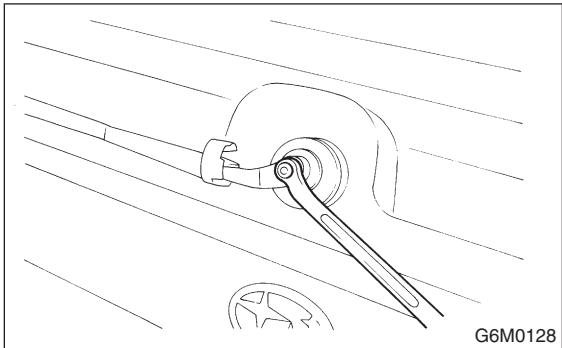

### B: INSTALLATION S902402A11

Install in the reverse order of removal.

**NOTE:**

Remove metal sludge from the wiper arm fixture before installing it.

**Tightening torque:**

**5.9 N·m (0.6 kgf·m, 4.3 ft-lb)**

### C: ADJUSTMENT S902402A01

Adjust wiper blade in original position as shown in figure by changing wiper arm installation.

**Original position:**

**A:  $30 \pm 5$  mm (1.18  $\pm$  0.20 in)**

