


## 10. Wiper Control Relay S902403

### A: INSPECTION S902403A10

- 1) Connect battery to terminal No. 1 and ground terminal No. 2.
- 2) Check continuity between terminals.

When current flows.	Between terminals No. 3 and No. 4	Continuity does not exist.
	Between terminals No. 3 and No. 5	Continuity exists.
When current does not flow.	Between terminals No. 3 and No. 4	Continuity exists.
	Between terminals No. 3 and No. 5	Continuity does not exist.
	Between terminals No. 1 and No. 2	Continuity exists.

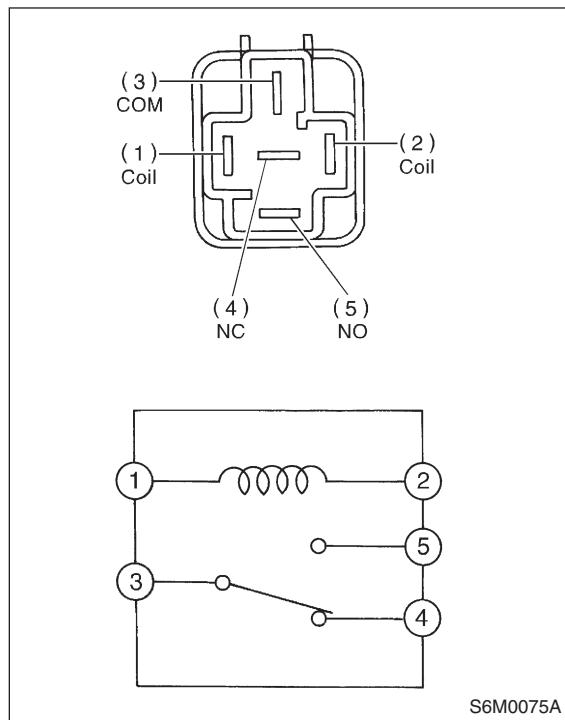

# WIPER CONTROL RELAY

Wiper and Washer Systems

---

**MEMO:**