

8. Read Diagnostic Trouble Code


S006508

A: OPERATION S006508A16

1. WITHOUT SUBARU SELECT MONITOR

S006508A1602


- 1) Take out diagnosis connector from side of driver's seat heater unit.

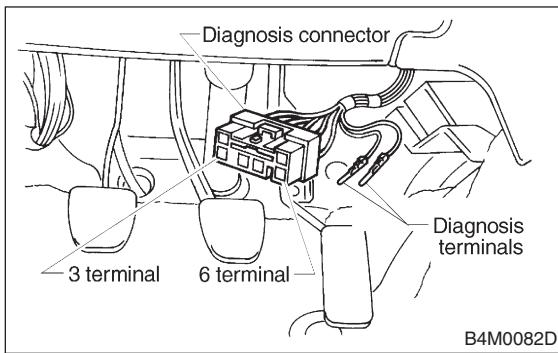

- 6) After the start code (11) is shown, the trouble codes will be shown in order of the last information first. These repeat for a maximum of 3 minutes.

NOTE:

- When there are no trouble codes in memory, only the start code (11) is shown.
- When on-board diagnosis of the ABS control module detects a problem, the information (up to a maximum of three) will be stored in the EEPROM as a trouble code. When there are more than three, the most recent three will be stored. (Stored codes will stay in memory until they are cleared.)

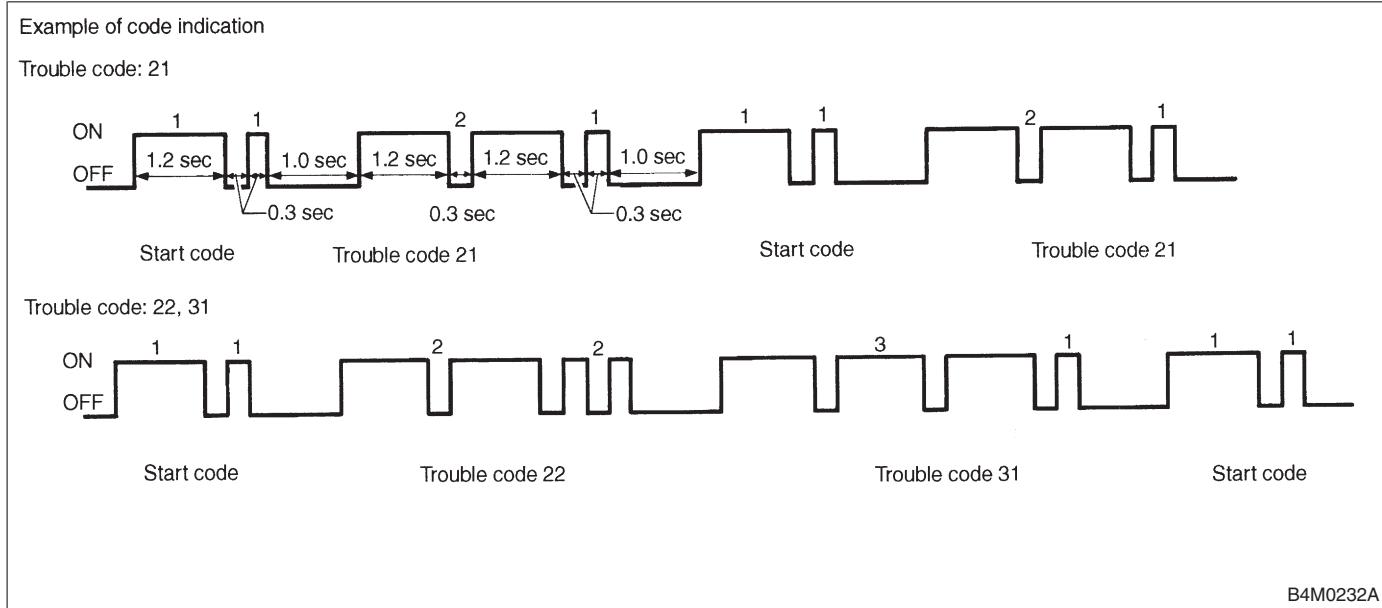

2. WITH SUBARU SELECT MONITOR

S006508A1601

Refer to SUBARU SELECT MONITOR for information about how to obtain and understand trouble codes.
<Ref. to ABS-14 OPERATION, Subaru Select Monitor.>