


12. Proportioning Valve

S405167

A: REMOVAL


S405167A18

With ABS model

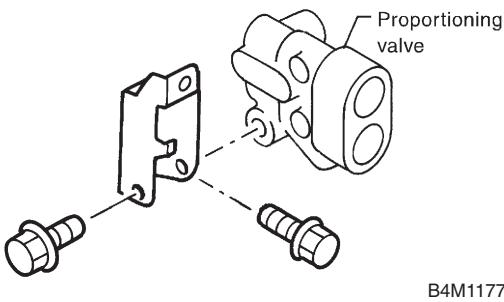

B4M1177A

Without ABS model

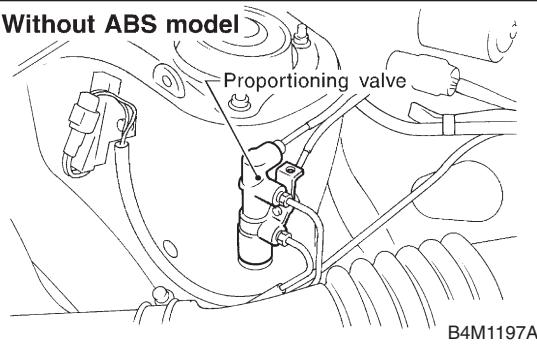

B4M1197A

- 1) Remove brake pipe from proportioning valve at four places.
- 2) Remove proportioning valve from its bracket.

CAUTION:

Do not disassemble or adjust the proportioning valve. (The proportioning valve must be replaced as an assembly.)

B: INSTALLATION

S405167A11

- 1) Install proportioning valve to bracket.
- 2) Connect brake pipes correctly to proportioning valve.
- 3) Bleed air, then check each joint of brake pipe for oil leaks.

Tightening torque:

Proportioning valve to brake pipe flare nut:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

Proportioning valve to bracket (Normal brake vehicle):
22 N·m (2.25 kgf-m, 16.3 ft-lb)

Proportioning valve to bracket (ABS equipped vehicle):
18 N·m (1.8 kgf-m, 13.0 ft-lb)


C: INSPECTION

S405167A10

1) Install the oil pressure gauges to measure the master cylinder fluid pressure (front wheel brake fluid pressure) and rear wheel cylinder fluid pressure.

2) Bleed air from the oil pressure gauges.
3) Check the master cylinder fluid pressure and rear wheel cylinder fluid pressure.

The standard values are shown in Figure.

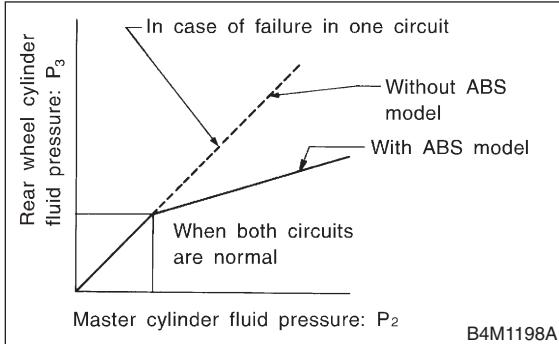

4) For the oil pressure in case of split point, <Ref. to BR-2 SPECIFICATIONS, General Description.>