



3. Parking Brake Cable S404170A10

A: REMOVAL S404170A18


- 1) Lift-up vehicle.
- 2) Remove rear wheels.
- 3) Remove rear cushion.
- 4) Remove console box from front floor.
- 5) Loosen parking cable adjusting nut.
- 6) Roll up floor mat and remove clamps.

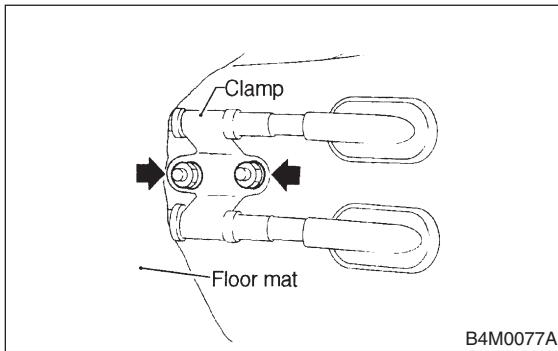

- 7) Remove inner cable end from equalizer.

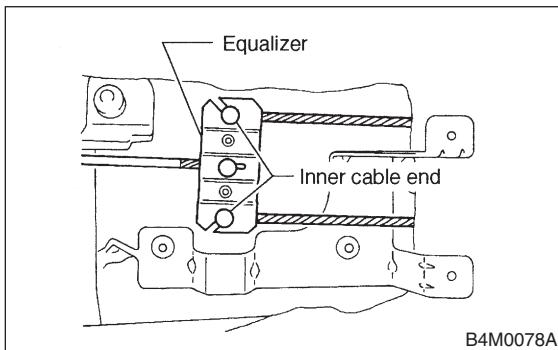

- 8) Pull out parking brake cable from parking brake assembly. <Ref. to PB-8 REMOVAL, Parking Brake Assembly (Rear Disc Brake).> or <Ref. to BR-36 REMOVAL, Rear Drum Brake Assembly.>
- 9) Pull out clamp from parking brake assembly.
- 10) Remove bolt and bracket from trailing link bracket.
- 11) Remove bolt and clamp from rear floor.

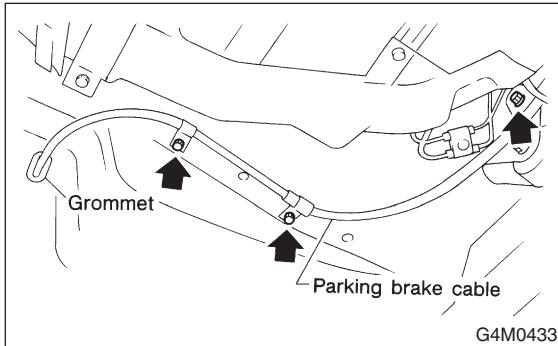

- 12) Detach grommet from rear floor.
- 13) Remove cable assembly from cabin by forcibly pulling it backward.

- 14) Detach parking brake cable from cable guide at rear trailing link.

B: INSTALLATION S404170A11

Install in the reverse order of removal.

NOTE:

- Be sure to pass cable through cable guide inside the tunnel.
- Be sure to adjust the shoe clearance. (Rear disc brake only) <Ref. to PB-10 ADJUSTMENT, Parking Brake Assembly (Rear Disc Brake).>

C: INSPECTION S404170A10

Check the removed cable and replace if damaged, rusty, or malfunctioning.

- 1) Check for smooth operation of the cable.
- 2) Check the inner cable for damage and rust.
- 3) Check the outer cable for damage, bends, and cracks.
- 4) Check the boot for damage, cracks, and deterioration.