

## 2. Parking Brake Lever S404171

### A: REMOVAL S404171A18

- 1) Remove console box from front floor.
- 2) Disconnect electric connector for parking brake switch.
- 3) Loosen parking brake adjuster, and remove inner cable end from equalizer.
- 4) Remove parking brake lever.

### B: INSTALLATION S404171A11

Install in the reverse order of removal.

**Tightening torque (Lever installing bolt and nut):**

**18 N·m (1.8 kgf-m, 13.0 ft-lb)**

### C: INSPECTION S404171A10

While pulling parking brake lever upward, count the notches.

**Lever stroke:**

**7 to 8 notches when pulled with a force of 196 N (20 kgf, 44 lb)**

Incorrect, adjust the parking brake. <Ref. to PB-6  
ADJUSTMENT, Parking Brake Lever.>

### D: ADJUSTMENT S404171A01

- 1) Adjust parking brake lever by turning adjusting nut until parking brake lever stroke is set at 7 to 8 notches with operating force of 196 N (20 kgf, 44 lb).
- 2) Tighten lock nut.

**Tightening torque (Lock nut):**

**5.9 N·m (0.60 kgf-m, 4.3 ft-lb)**

