


6. Radiator Cap S106064

A: INSPECTION S106064A10

- 1) Attach radiator cap to tester.

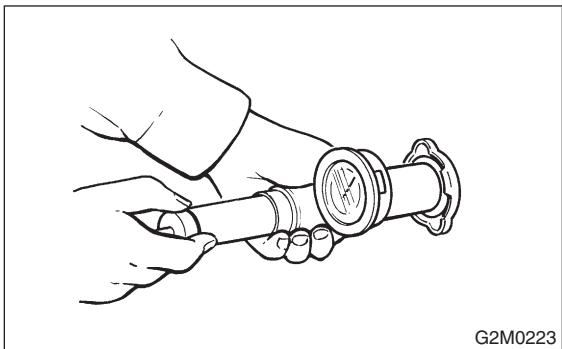

G2M0223

- 2) Increase pressure until tester gauge pointer stops. Radiator cap is functioning properly if it holds the service limit pressure for five to six seconds.

Standard pressure:

93 — 123 kPa (0.95 — 1.25 kg/cm², 14 — 18 psi)

Service limit pressure:

83 kPa (0.85 kg/cm², 12 psi)

CAUTION:

Be sure to remove foreign matter and rust from the cap in advance; otherwise, results of pressure test will be incorrect.