



9. Reservoir Tank S106075**A: REMOVAL** S106075A18


1) Disconnect over flow hose from radiator filler neck position.

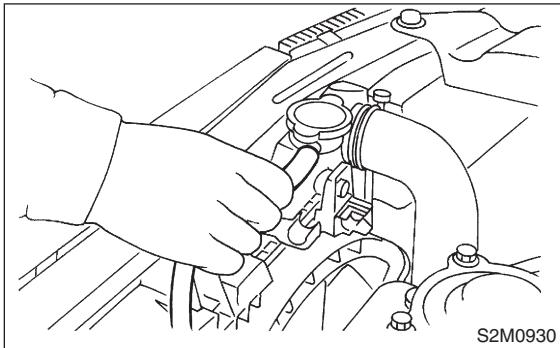

2) Remove bolts which install reservoir tank onto radiator main fan shroud.

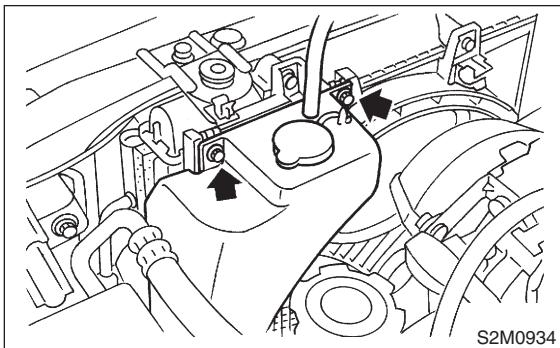


3) Remove reservoir tank.

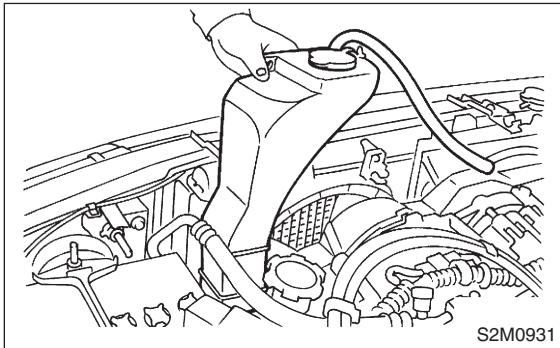**B: INSTALLATION** S106075A11

Install in the reverse order of removal.

Tightening torque:

$4.9 \text{ N}\cdot\text{m} (0.50 \text{ kgf}\cdot\text{m}, 3.6 \text{ ft-lb})$

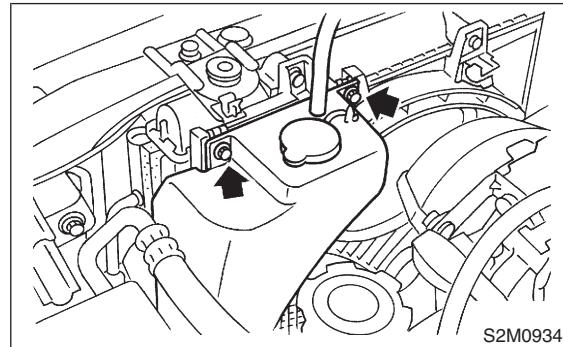**C: INSPECTION** S106075A10

Make sure the engine coolant level is between full and low.