


# DRAIN VALVE

Emission Control (Aux. Emission Control Devices)


## 14. Drain Valve S110088

### A: REMOVAL S110088A18


- 1) Disconnect battery ground cable.

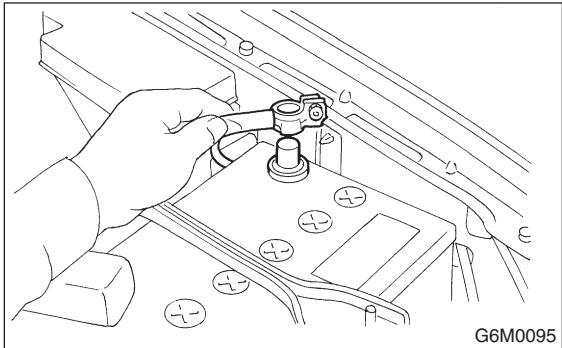


- 2) Lift-up the vehicle.
- 3) Remove canister. <Ref. to EC-9 REMOVAL, Canister.>

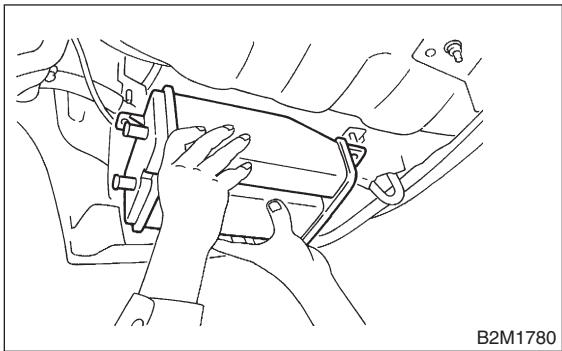


- 4) Disconnect connector from drain valve.

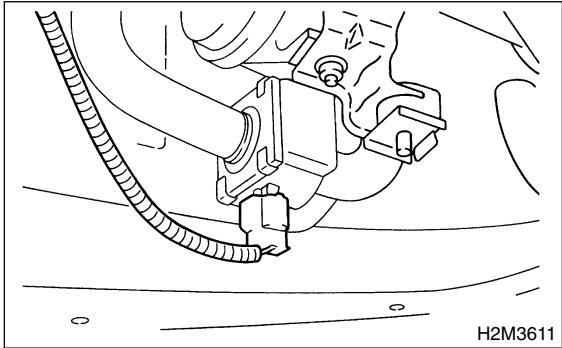


- 5) Disconnect evaporation hoses from drain valve.

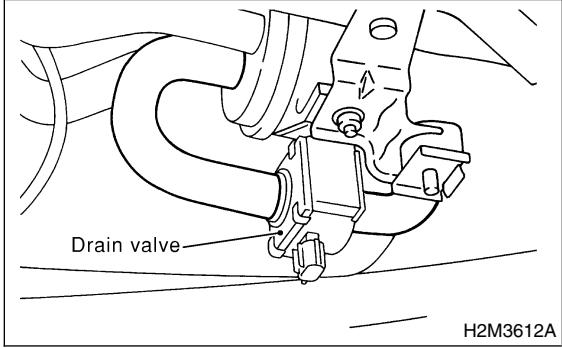

- 6) Remove bolt which installs drain filter and drain valve brackets on body.

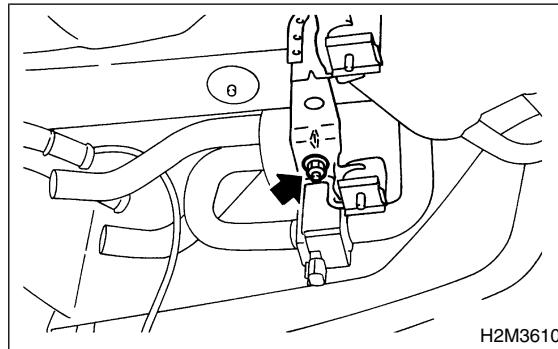

- 7) Move drain filter to upper side, and remove drain valve with bracket.

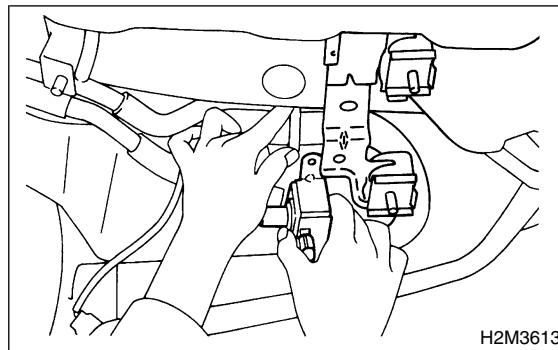


### B: INSTALLATION S110088A11

Install in the reverse order of removal.

#### **Tightening torque:**

**22.5 N·m (2.3 kgf·m, 16.6 ft-lb)**

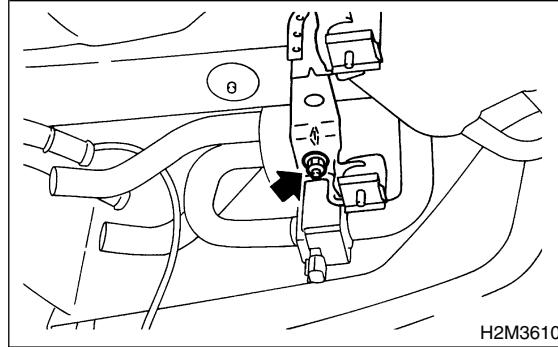

### C: INSPECTION S110088A10

- 1) Make sure that all hoses are installed correctly.
- 2) Make sure that hoses are not cracked or loose.

## **DRAIN VALVE**

Emission Control (Aux. Emission Control Devices)

---

**MEMO:**