


## 9. Fuel Tank Pressure Sensor

S110030


### A: REMOVAL

S110030A18


- 1) Remove fuel tank. <Ref. to FU-66 REMOVAL, Fuel Tank.>

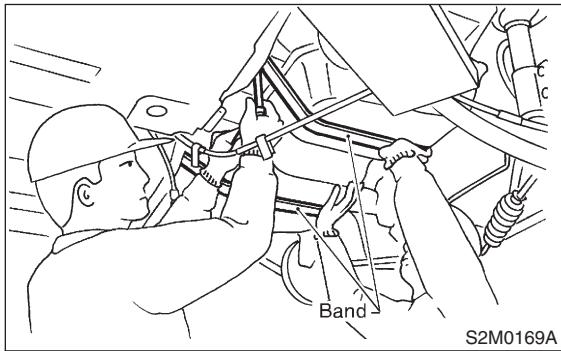


- 2) Remove protector cover.

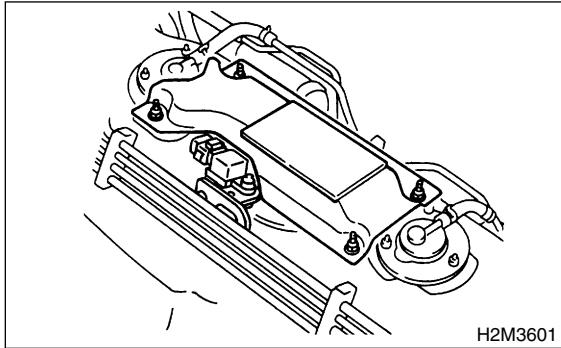


- 3) Disconnect connector from fuel tank pressure sensor.

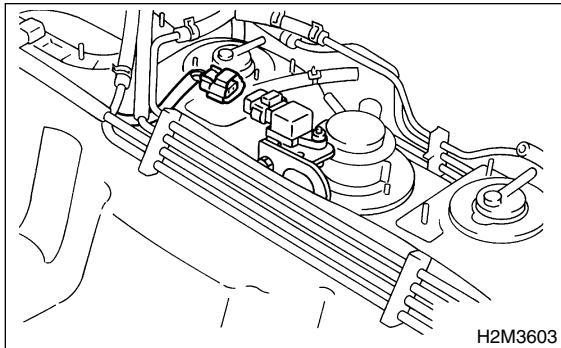

- 4) Release clips which hold fuel pipes onto fuel tank.

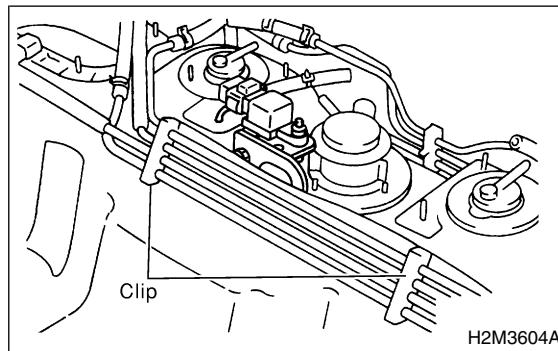


- 5) Move two fuel pipes to upper side, and remove bolt which install fuel tank pressure sensor to bracket.

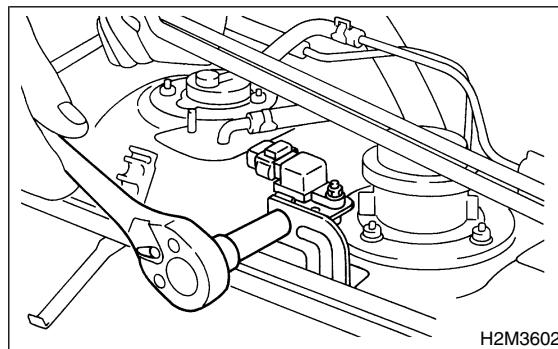

- 6) Move clip, and disconnect pressure hose from fuel tank.

- 7) Disconnect pressure hose from fuel tank pressure sensor.

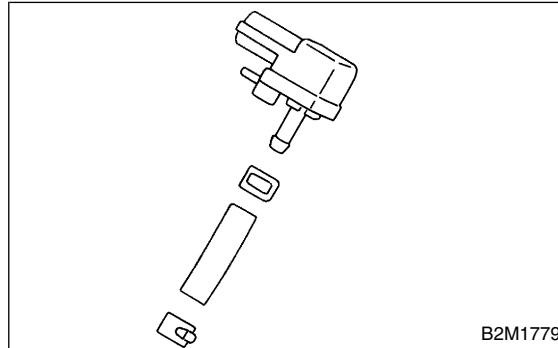

# FUEL TANK PRESSURE SENSOR

Emission Control (Aux. Emission Control Devices)


## B: INSTALLATION

S110030A11

Install in the reverse order of removal.

### ***Tightening torque:***

***7.35 N·m (0.75 kgf-m, 5.4 ft-lb)***

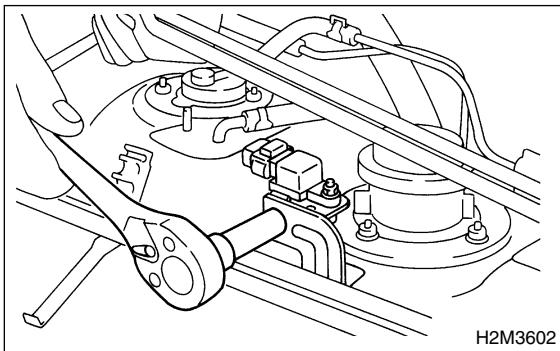

## C: INSPECTION

S110030A10

Make sure that hoses are not cracked or loose.