

PRESSURE CONTROL SOLENOID VALVE

Emission Control (Aux. Emission Control Devices)


10. Pressure Control Solenoid Valve

S110031


A: REMOVAL

S110031A18


- 1) Disconnect battery ground cable.

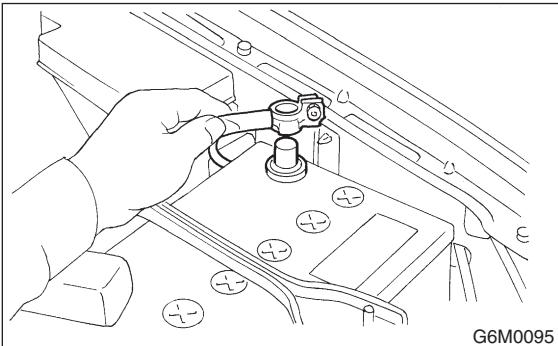


- 2) Remove canister. <Ref. to EC-7 REMOVAL, Canister.>

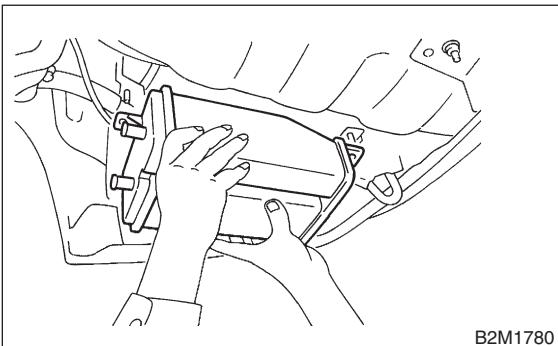


- 3) Disconnect evaporation hoses (A) from joint pipes.

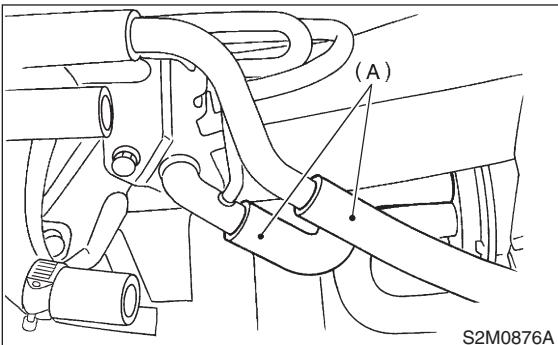

- 4) Remove bolt which installs pressure control solenoid valve holding bracket on body.

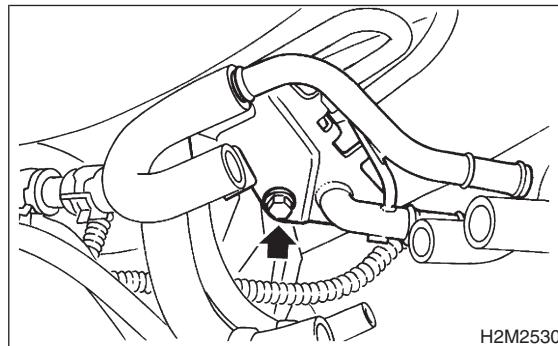


- 5) Disconnect connector from pressure control solenoid valve.

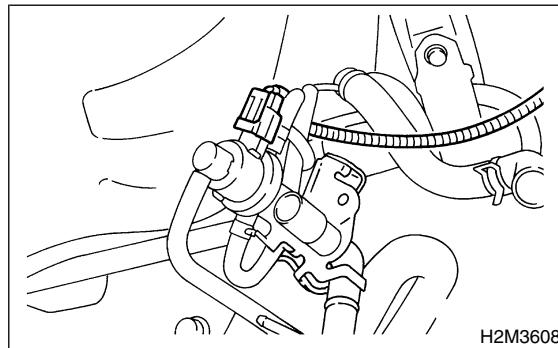


- 6) Disconnect two evaporation hoses from pressure control solenoid valve.

- 7) Remove pressure control solenoid valve with bracket.

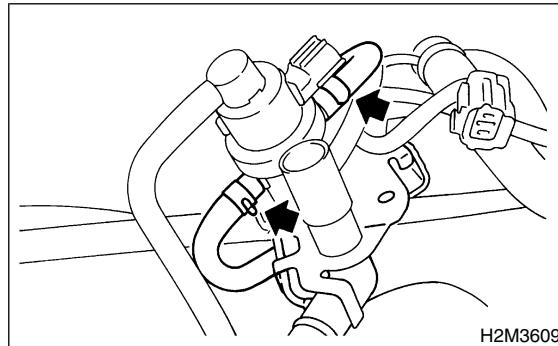


- 8) Remove pressure control solenoid valve from bracket.

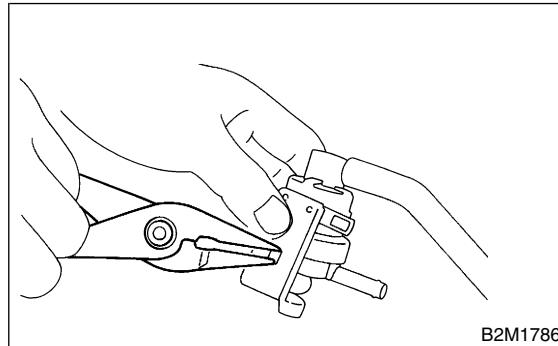

PRESSURE CONTROL SOLENOID VALVE

Emission Control (Aux. Emission Control Devices)

- 9) Disconnect vacuum hose from pressure control solenoid valve.

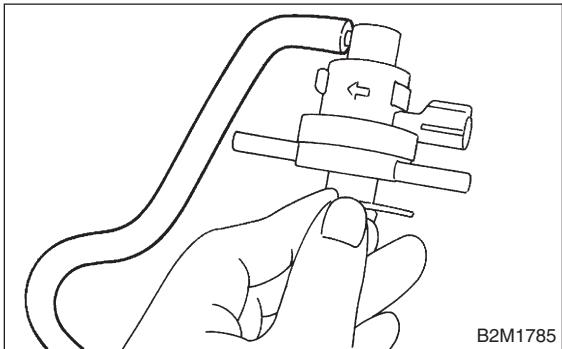


B: INSTALLATION

S110031A11

Install in the reverse order of removal.

Tightening torque:

17.6 N·m (1.8 kgf-m, 13.0 ft-lb)

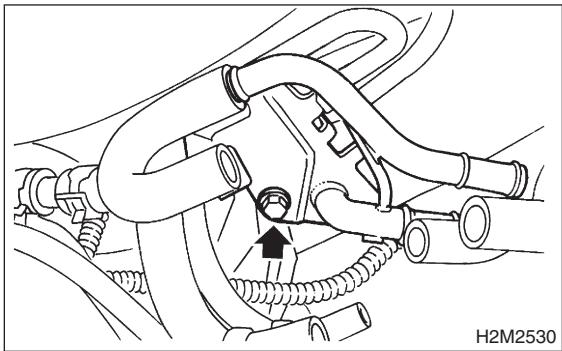

C: INSPECTION

S110031A10

Make sure that hoses are not cracked or loose.