

PURGE CONTROL SOLENOID VALVE

Emission Control (Aux. Emission Control Devices)


5. Purge Control Solenoid Valve

S110035


A: REMOVAL

S110035A18


- 1) Disconnect battery ground cable.

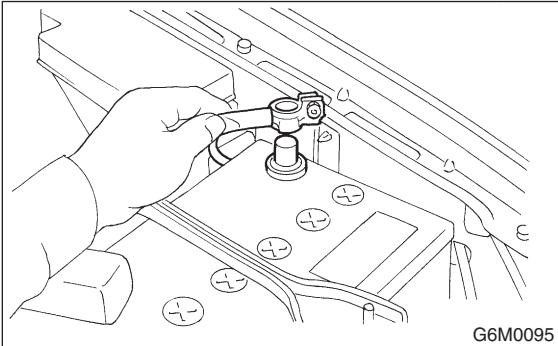

- 2) Remove air cleaner case <Ref. to IN-4 REMOVAL, Air Cleaner Case.> and air intake duct. <Ref. to IN-5 REMOVAL, Air Intake Duct.>

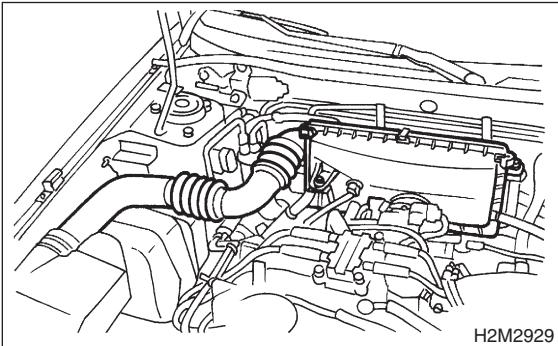


- 3) Remove bolt which installs purge control solenoid valve to intake manifold.

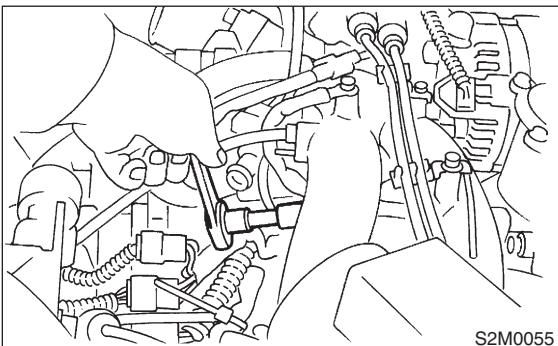

- 4) Take out purge control solenoid valve.
- 5) Disconnect connector from purge control solenoid valve.

- 6) Disconnect vacuum hoses from purge control solenoid valve.

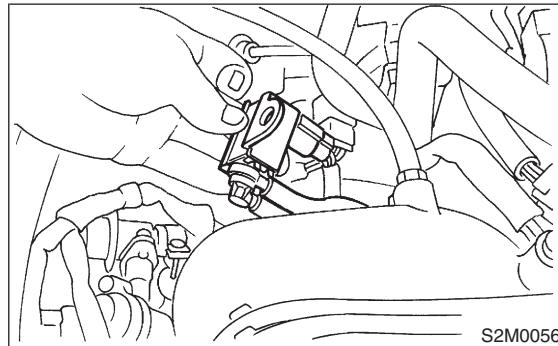


B: INSTALLATION

S110035A11

Install in the reverse order of removal.


Tightening torque:

15.7 N·m (1.6 kgf·m, 11.6 ft-lb)

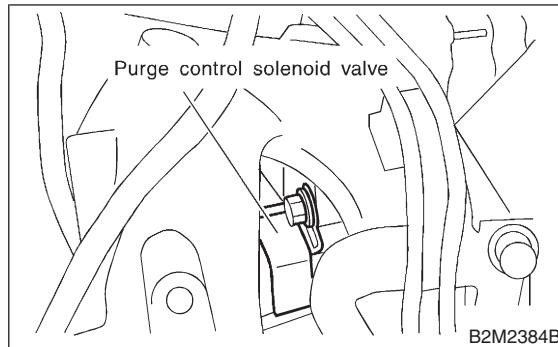

CAUTION:

Carefully connect the evaporation hoses.

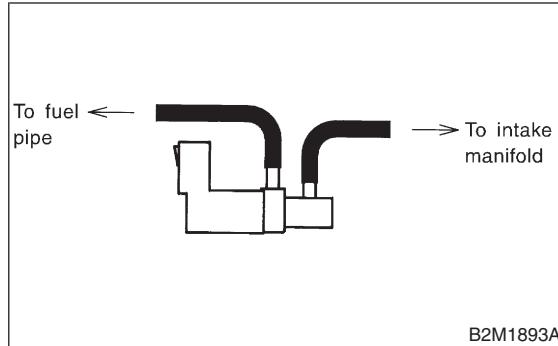

C: INSPECTION

S110035A10

Make sure hoses are not cracked or loose.