


SHUT VALVE

Emission Control (Aux. Emission Control Devices)


13. Shut Valve S110024

A: REMOVAL S110024A18


- 1) Drain fuel from fuel tank. <Ref. to FU-64 DRAINING FUEL, Fuel.>

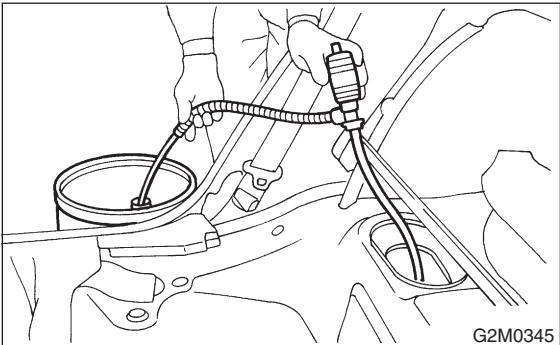


- 2) Disconnect battery ground cable.

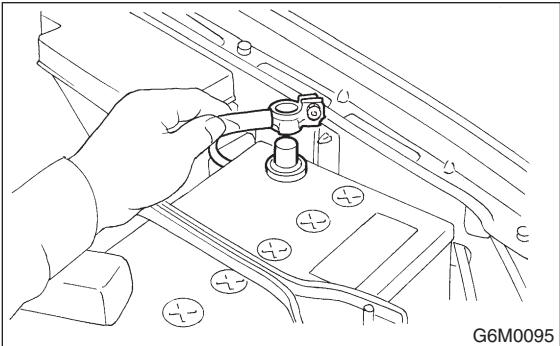


- 3) Remove fuel filler pipe. <Ref. to FU-72 REMOVAL, Fuel Filler Pipe.>

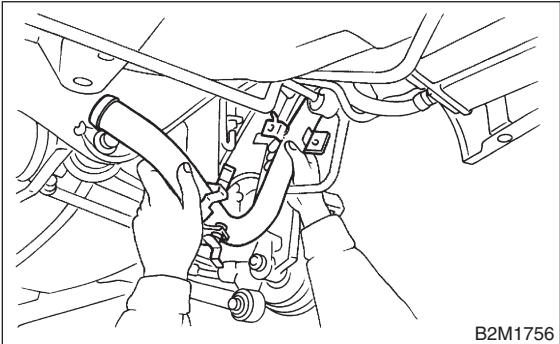

- 4) Disconnect evaporation hoses from shut valve.

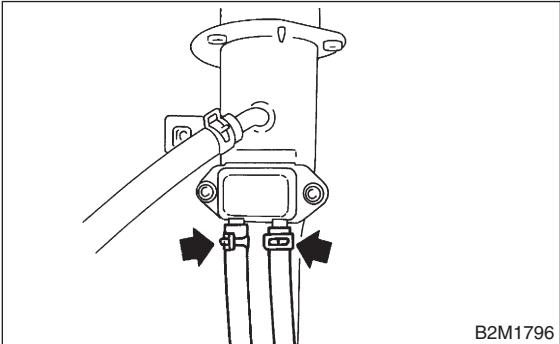

- 5) Remove shut valve from fuel filler pipe.

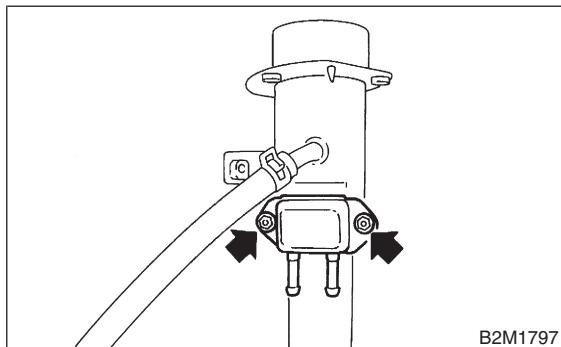


B: INSTALLATION S110024A11

Install in the reverse order of removal.

Tightening torque:

4.4 N·m (0.45 kgf·m, 3.3 ft-lb)

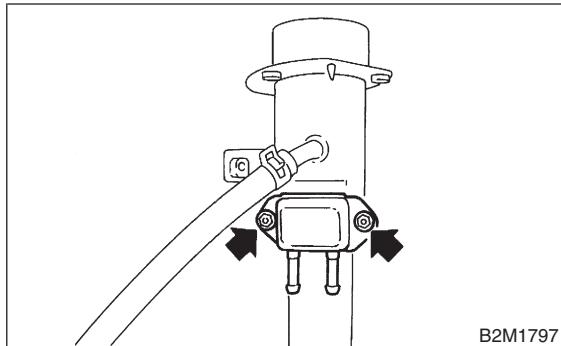

C: INSPECTION S110024A10

Make sure that hoses are not cracked or loose.