


SUB FUEL LEVEL SENSOR

Emission Control (Aux. Emission Control Devices)


8. Sub Fuel Level Sensor S110029A18

A: REMOVAL


- 1) Release fuel pressure. <Ref. to FU-64
RELEASING OF FUEL PRESSURE, Fuel.>
- 2) Open fuel flap lid, and remove fuel filler cap.

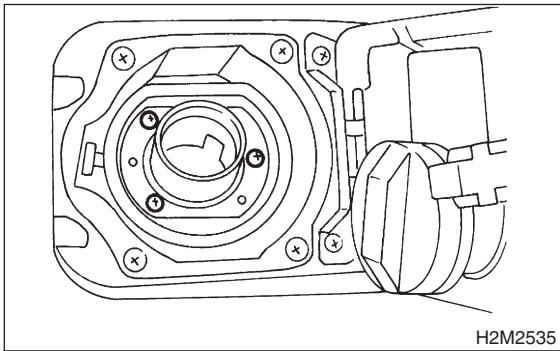


- 3) Disconnect battery ground cable.

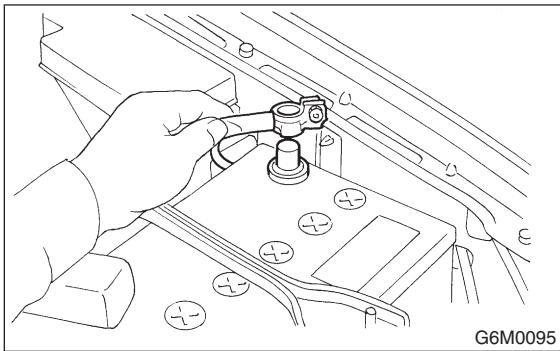


- 4) Remove service hole cover.

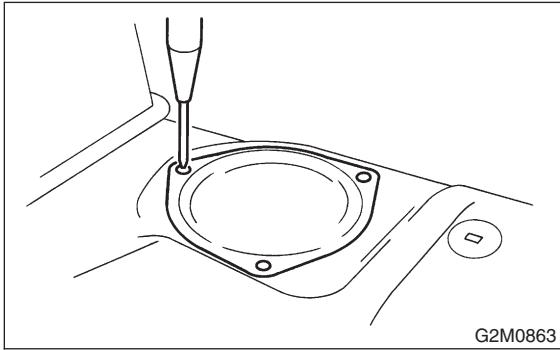


- 5) Disconnect connector from fuel sub level sensor, and disconnect jet pump hose.

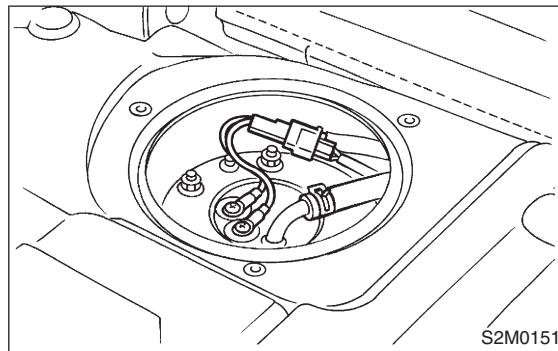

- 6) Remove bolts which install fuel sub level sensor on fuel tank.

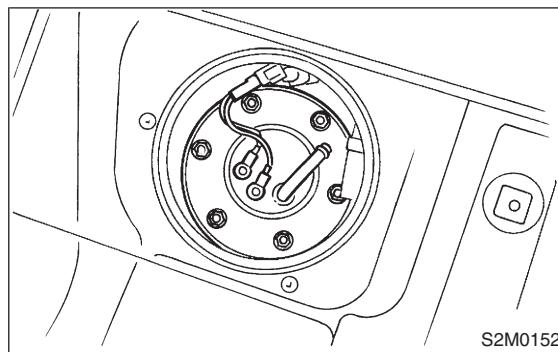

- 7) Remove fuel sub level sensor.

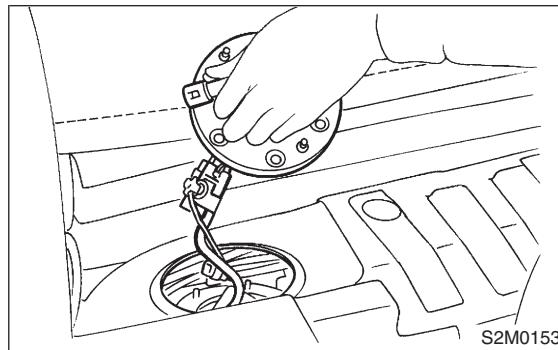

SUB FUEL LEVEL SENSOR

Emission Control (Aux. Emission Control Devices)

B: INSTALLATION

S110029A11


Install in the reverse order of removal.

Do the following:

- (1) Install fuel sub level sensor.

Tightening torque:

T: 4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

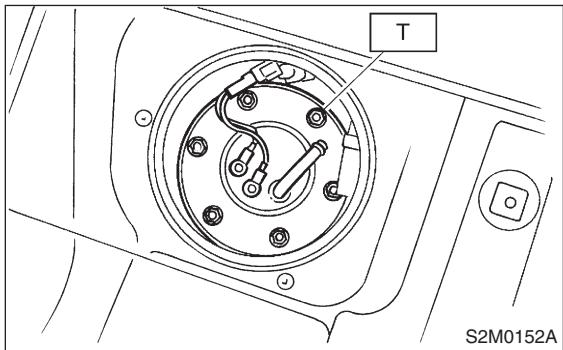

- (2) Connect connector to fuel pump relay.

