



12. Vent Valve S110033

A: REMOVAL S110033A18


- 1) Remove fuel tank. <Ref. to FU-66 REMOVAL, Fuel Tank.>

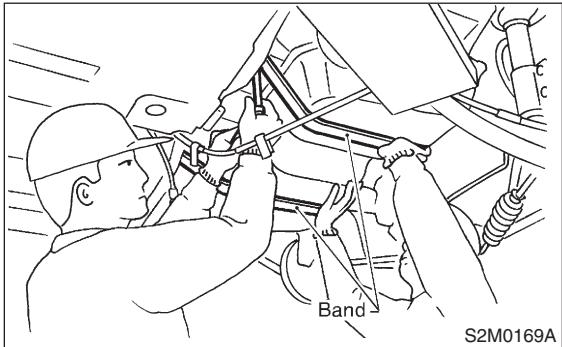


- 2) Remove protector cover.

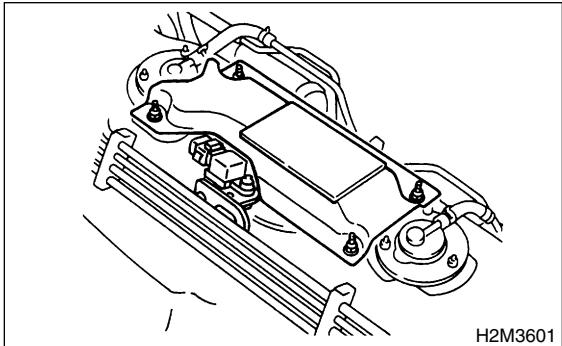

- 3) Move clips, and disconnect hoses from vent valve.

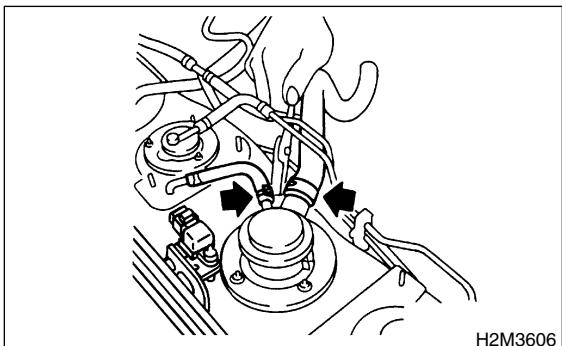

- 4) Remove nuts which install vent valve on fuel tank.

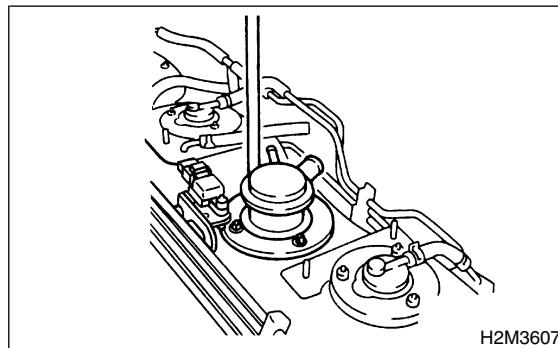

B: INSTALLATION S110033A11


Install in the reverse order of removal.

CAUTION:

Replace rubber seat with a new one.

Tightening torque:

T: 4.4 N·m (0.45 kgf·m, 3.3 ft·lb)

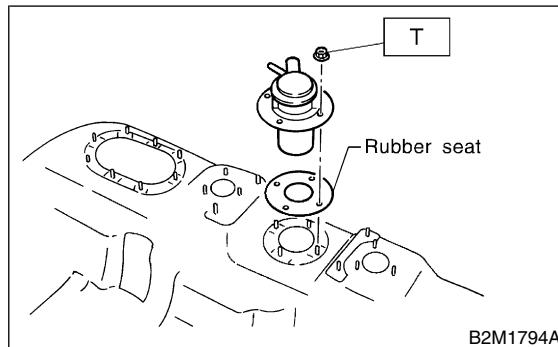

C: INSPECTION S110033A10

Make sure that hoses are not cracked or loose.