

12. Atmospheric Pressure Sensor

S105045


A: REMOVAL

S105045A18


NOTE:

This sensor is installed on 2500 cc models only.


- 1) Disconnect battery ground cable.

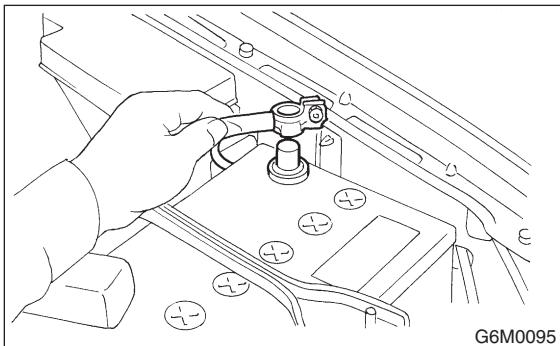

- 2) Disconnect connector from atmospheric pressure sensor.

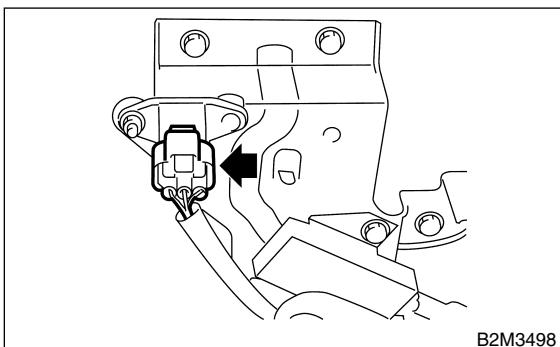

- 3) Remove atmospheric pressure sensor from bracket.

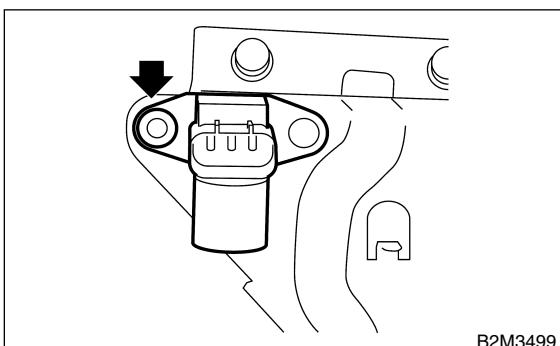

B: INSTALLATION

S105045A11

Install in the reverse order of removal.

Tightening torque:

6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

