

ENGINE COOLANT TEMPERATURE SENSOR


Fuel Injection (Fuel Systems)

4. Engine Coolant Temperature Sensor


A: REMOVAL

S105047A18


- 1) Disconnect battery ground cable.

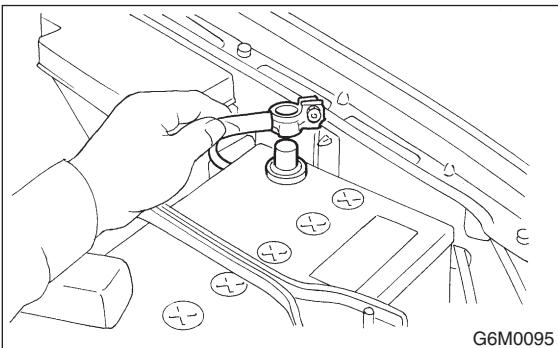

- 2) Remove air intake duct <Ref. to IN-5 REMOVAL, Air Intake Duct.> and air cleaner assembly. <Ref. to IN-4 REMOVAL, Air Cleaner Case.>

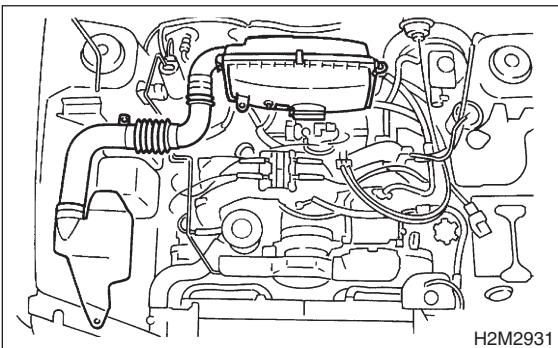

- 3) Disconnect connector from engine coolant temperature sensor.

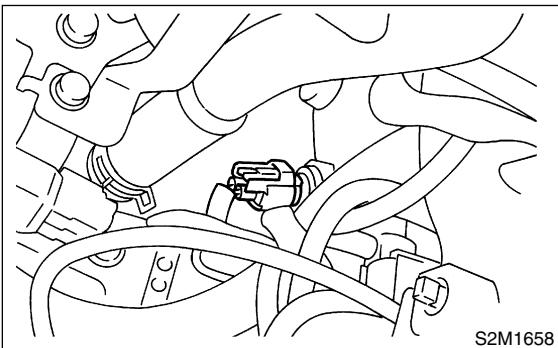

- 4) Remove engine coolant temperature sensor.

B: INSTALLATION

S105047A11

Install in the reverse order of removal.

Tightening torque:

25 N·m (2.5 kgf·m, 18.1 ft-lb)

