


## 26. Fuel Cut Valve S105021


### A: REMOVAL AND INSTALLATION

S105021A18

- 1) Remove fuel tank. <Ref. to FU-66 REMOVAL, Fuel Tank.>

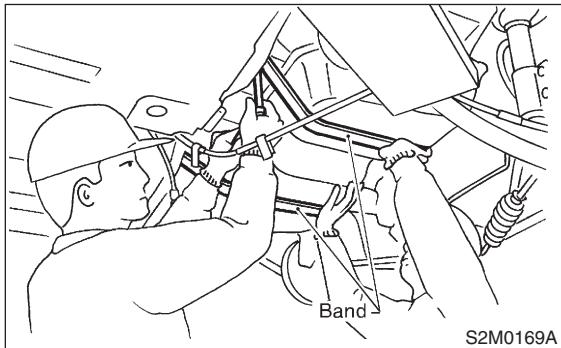


- 2) Remove protect cover.

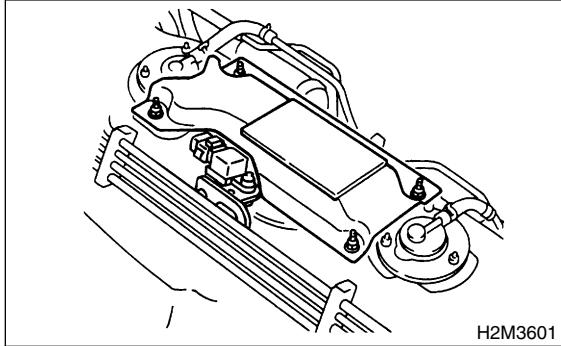

- 3) Disconnect evaporation hose from fuel cut valve.

- 4) Remove fuel cut valve.

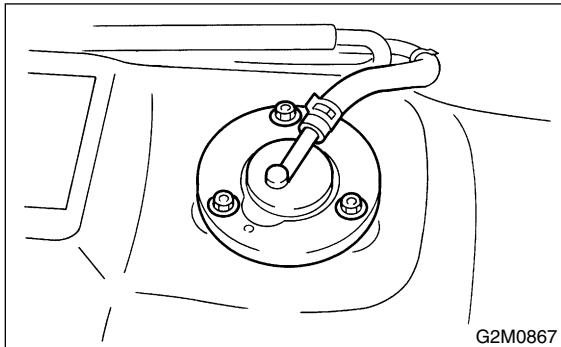

### B: INSTALLATION S105021A11

Install in the reverse order of removal.

#### *Tightening torque:*

**4.4 N·m (0.45 kgf-m, 3.3 ft-lb)**

