



18. Fuel Pump Relay S105048

A: REMOVAL S105048A18


- 1) Disconnect battery ground cable.

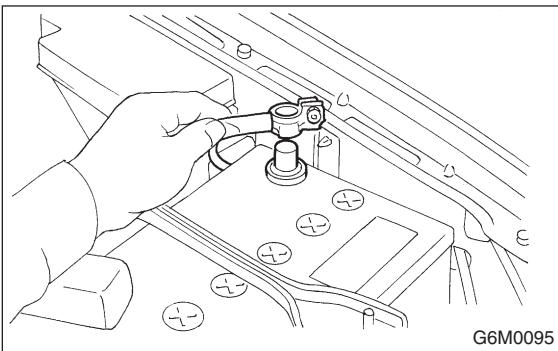

- 2) Disconnect connector from fuel pump relay.

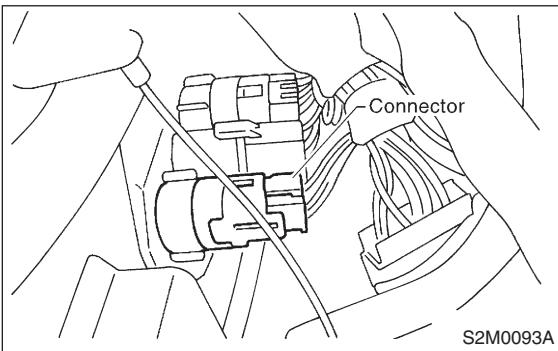

- 3) Remove fuel pump relay from mounting bracket.

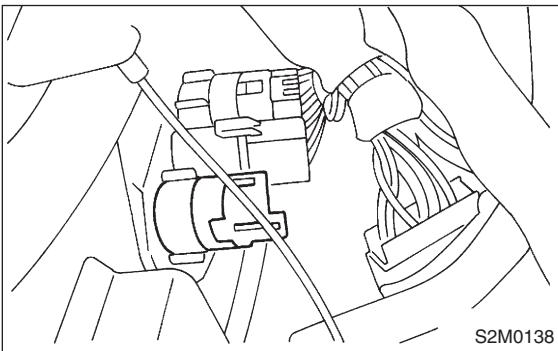

B: INSTALLATION S105048A11

Install in the reverse order of removal.