

13. Idle Air Control Solenoid Valve

S105056


A: REMOVAL

S105056A18


1. 2200 cc MODELS

S105056A1803


- 1) Disconnect battery ground cable.

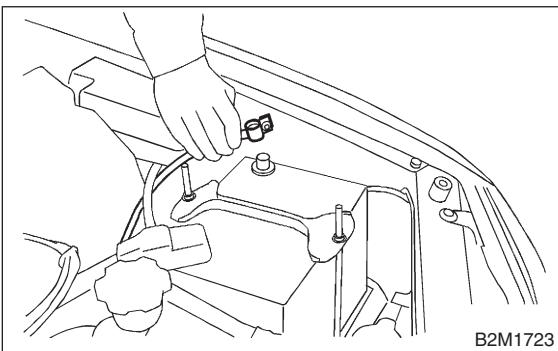


- 2) Disconnect connector from idle air control solenoid valve.

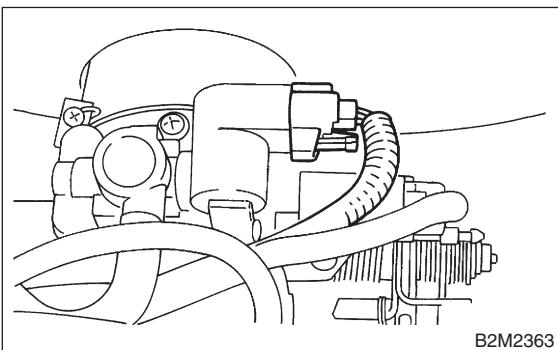

- 3) Disconnect air by-pass hose from idle air control solenoid valve.

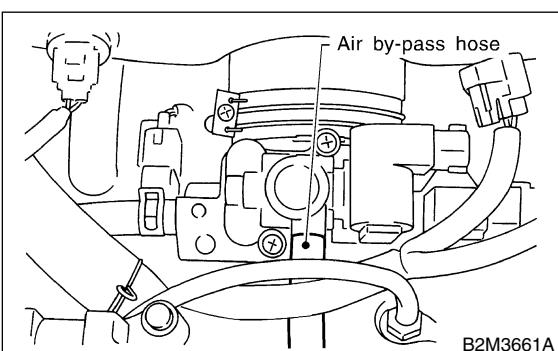


- 4) Remove idle air control solenoid valve from throttle body.

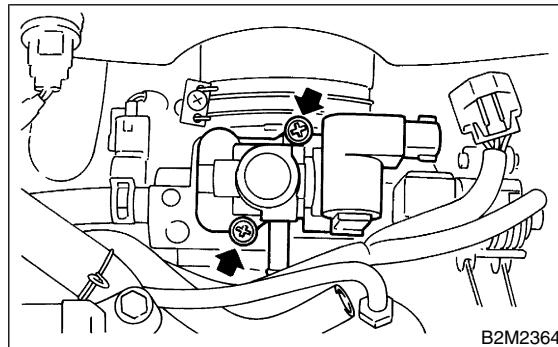


2. 2500 cc MODELS

S105056A1804


- 1) Disconnect battery ground cable.

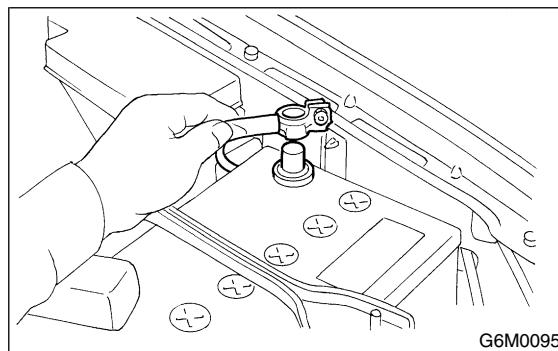

- 2) Disconnect connector from idle air control solenoid valve.

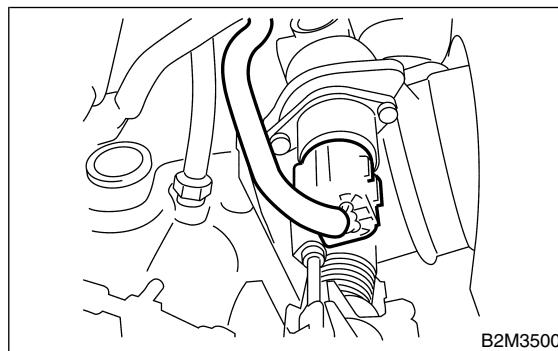

- 3) Remove idle air control solenoid valve from throttle body.

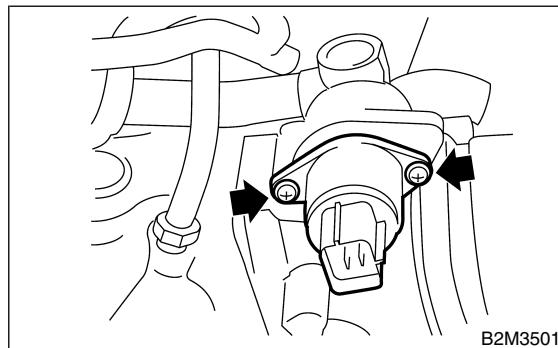

IDLE AIR CONTROL SOLENOID VALVE

Fuel Injection (Fuel Systems)

B: INSTALLATION

S105056A11

1. 2200 cc MODELS

S105056A1103


Install in the reverse order of removal.

CAUTION:

Replace gasket with a new one.

Tightening torque:

6.0 N·m (0.61 kgf-m, 4.4 ft-lb)

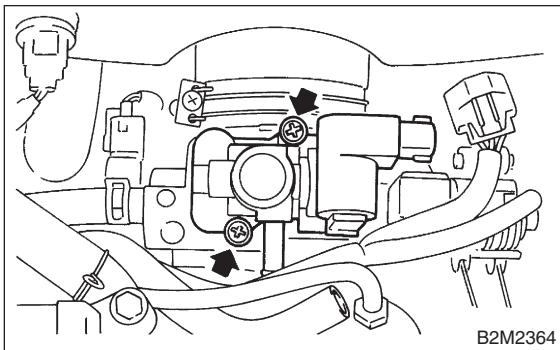

2. 2500 cc MODELS

S105056A1104

Install in the reverse order of removal.

CAUTION:

Always use new gasket.

Tightening torque:

6.0 N·m (0.61 kgf-m, 4.4 ft-lb)

