

11. Intake Air Temperature and Pressure Sensor

S105044


A: REMOVAL

S105044A18


NOTE:

This sensor is installed on 2500 cc models only.


- 1) Disconnect battery ground cable.

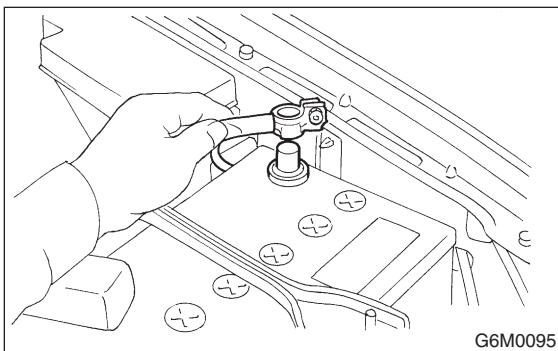


- 2) Disconnect spark plug cord from ignition coil and ignitor assembly.

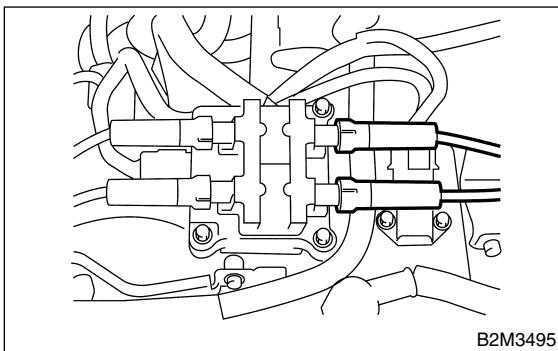

- 3) Disconnect connector from intake air temperature and pressure sensor.

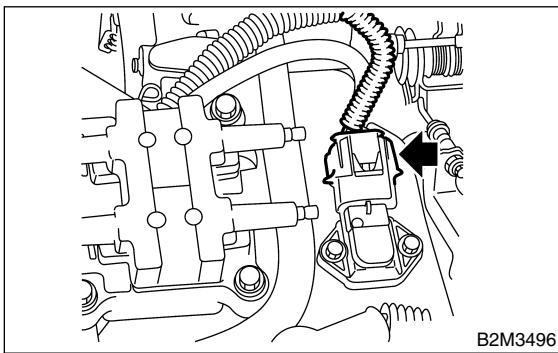

- 4) Remove intake air temperature and pressure sensor.

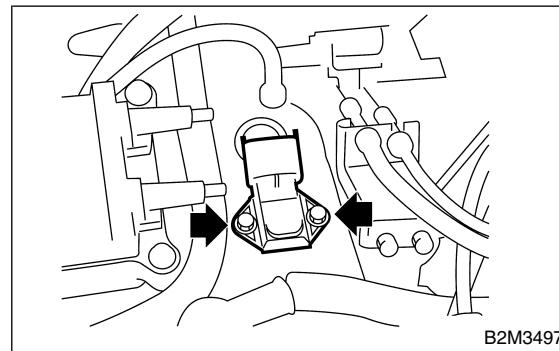


B: INSTALLATION

S105044A11

Install in the reverse order of removal.

Tightening torque:

$2.0 \text{ N}\cdot\text{m} (0.2 \text{ kgf}\cdot\text{m}, 1.4 \text{ ft-lb})$

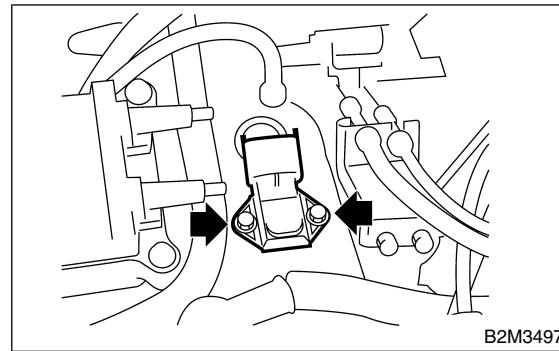

CAUTION:

Replace O-ring with new one.

