


MAIN RELAY

Fuel Injection (Fuel Systems)


17. Main Relay S105050

A: REMOVAL S105050A18


- 1) Disconnect battery ground cable.

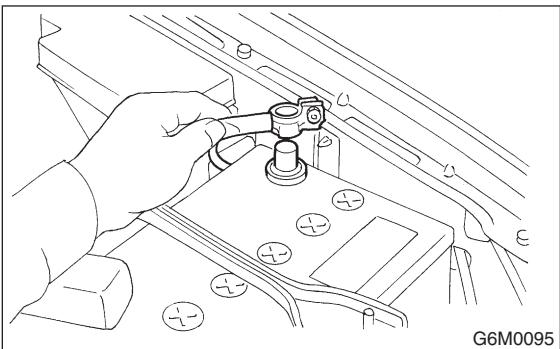

- 2) Remove bolt which holds bracket of main relay and fuel pump relay.

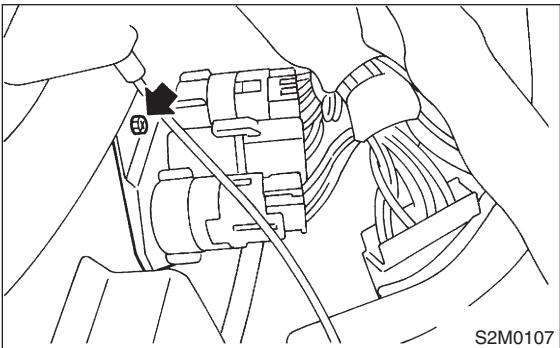


- 3) Disconnect connectors from relays.

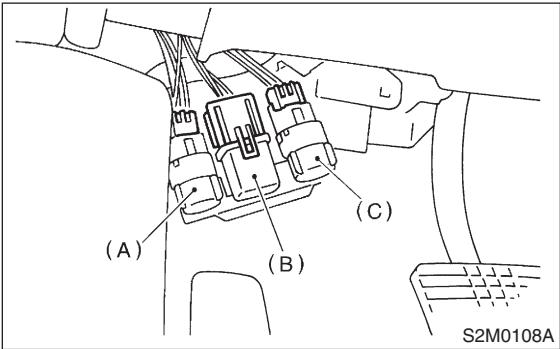

- (A) Rear accessory power supply relay
- (B) Main relay
- (C) Fuel pump relay

- 4) Remove main relay from mounting bracket.

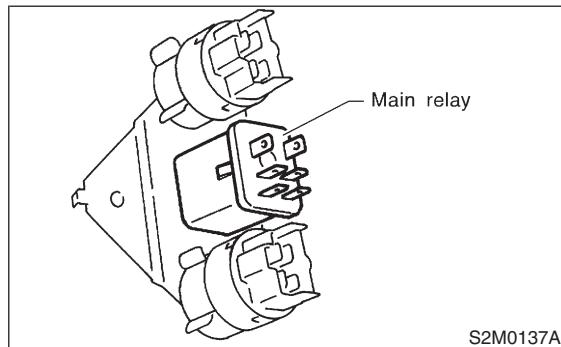

B: INSTALLATION S105050A11

Install in the reverse order of removal.