

PURGE CONTROL SOLENOID VALVE


Fuel Injection (Fuel Systems)

29. Purge Control Solenoid Valve


A: REMOVAL

S105606


- 1) Disconnect battery ground cable.

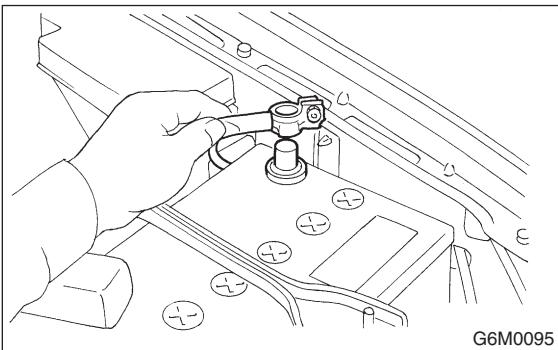

- 2) Remove bolt which installs purge control solenoid valve onto intake manifold.

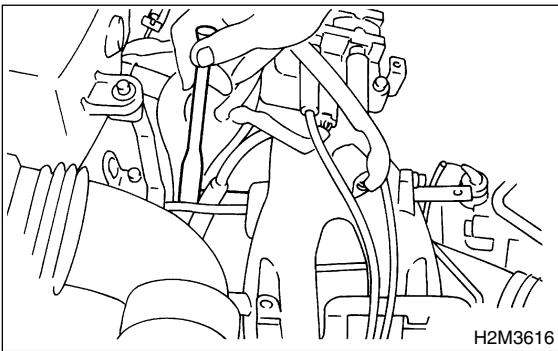

- 3) Take out purge control solenoid valve through the bottom of the intake manifold.
- 4) Disconnect connector and hoses from purge control solenoid valve.

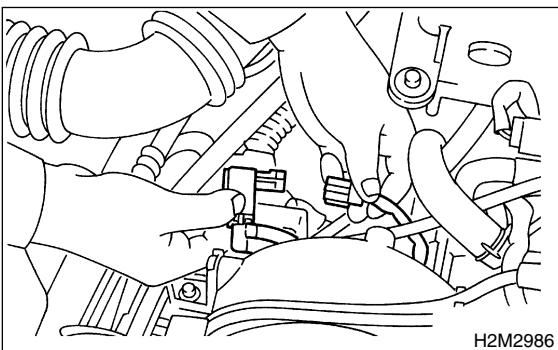


B: INSTALLATION

S105606A11

Install in the reverse order of removal.

Tightening torque:

16 N·m (1.6 kgf·m, 11.6 ft·lb)

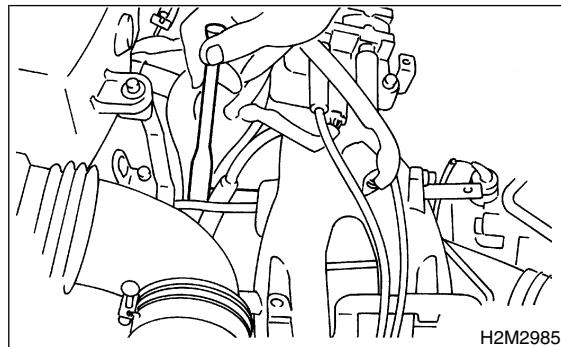

CAUTION:

Carefully connect the evaporation hoses.

