


# AIR CLEANER CASE

Intake (Induction)


## 2. Air Cleaner Case S104089

### A: REMOVAL S104089A18


- 1) Disconnect battery ground cable.

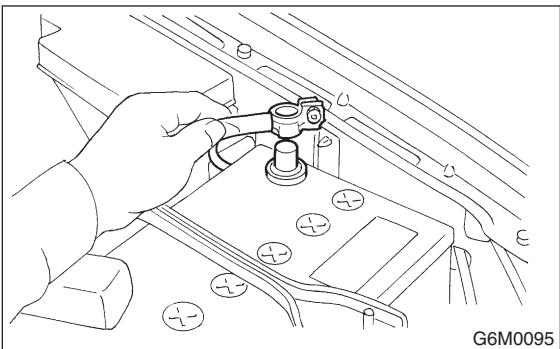

- 2) Disconnect connector from intake air temperature sensor. (2200 cc models)

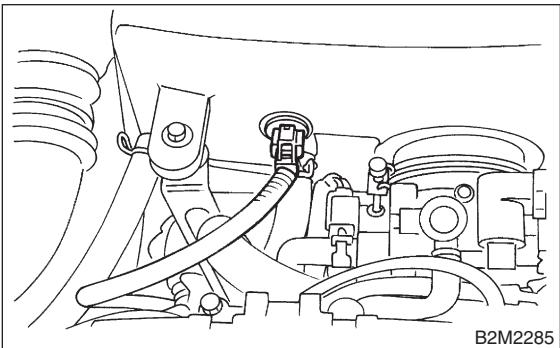


- 3) Loosen clamp which connects air cleaner case to throttle body.

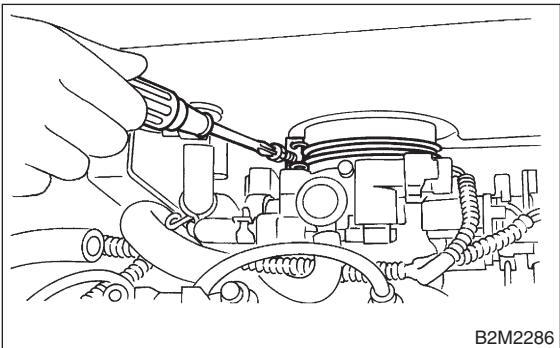

- 4) Disconnect hoses from air cleaner case.
- 5) Remove bolts which install air cleaner case to stays.

- 6) Remove air cleaner case.

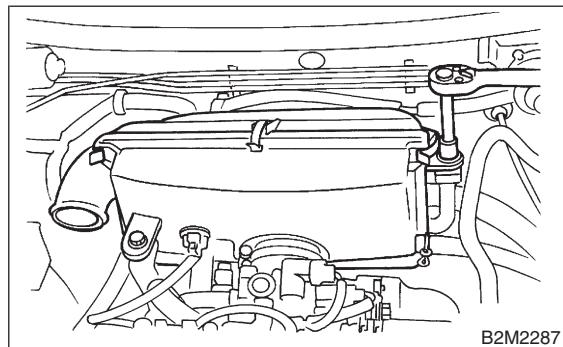

### B: INSTALLATION S104089A11

Install in the reverse order of removal.

### C: INSPECTION S104089A10

Inspect for cracks and loose connections.