



### 3. Air Intake Duct S104566

#### A: REMOVAL S104566A18


- 1) Remove bolt which installs air intake duct (A) on the front side of body.

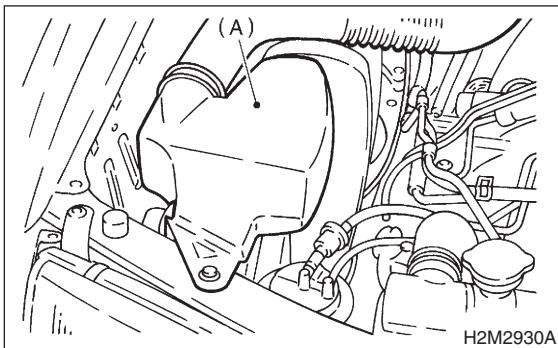

- 2) Remove bolt which installs air intake duct (B) on body.

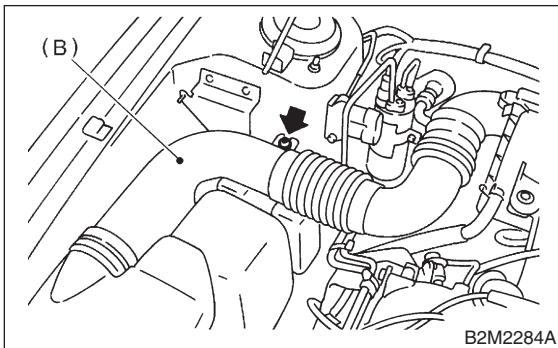

- 3) Remove air intake (A) and (B) as a unit.

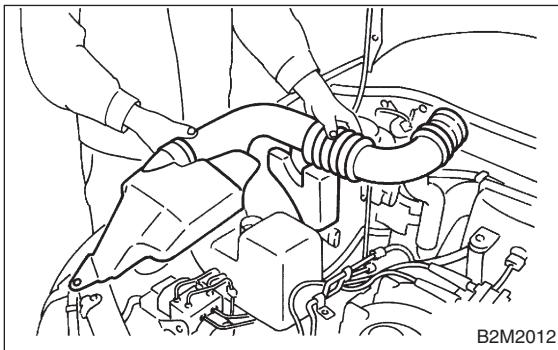

#### B: INSTALLATION S104566A11

Install in the reverse order of removal.

#### C: INSPECTION S104566A10

Inspect for cracks and loose connections.

# AIR INTAKE DUCT

Intake (Induction)

**MEMO:**