


GENERAL DESCRIPTION

Intake (Induction)

1. General Description S104001

A: COMPONENT S104001A05

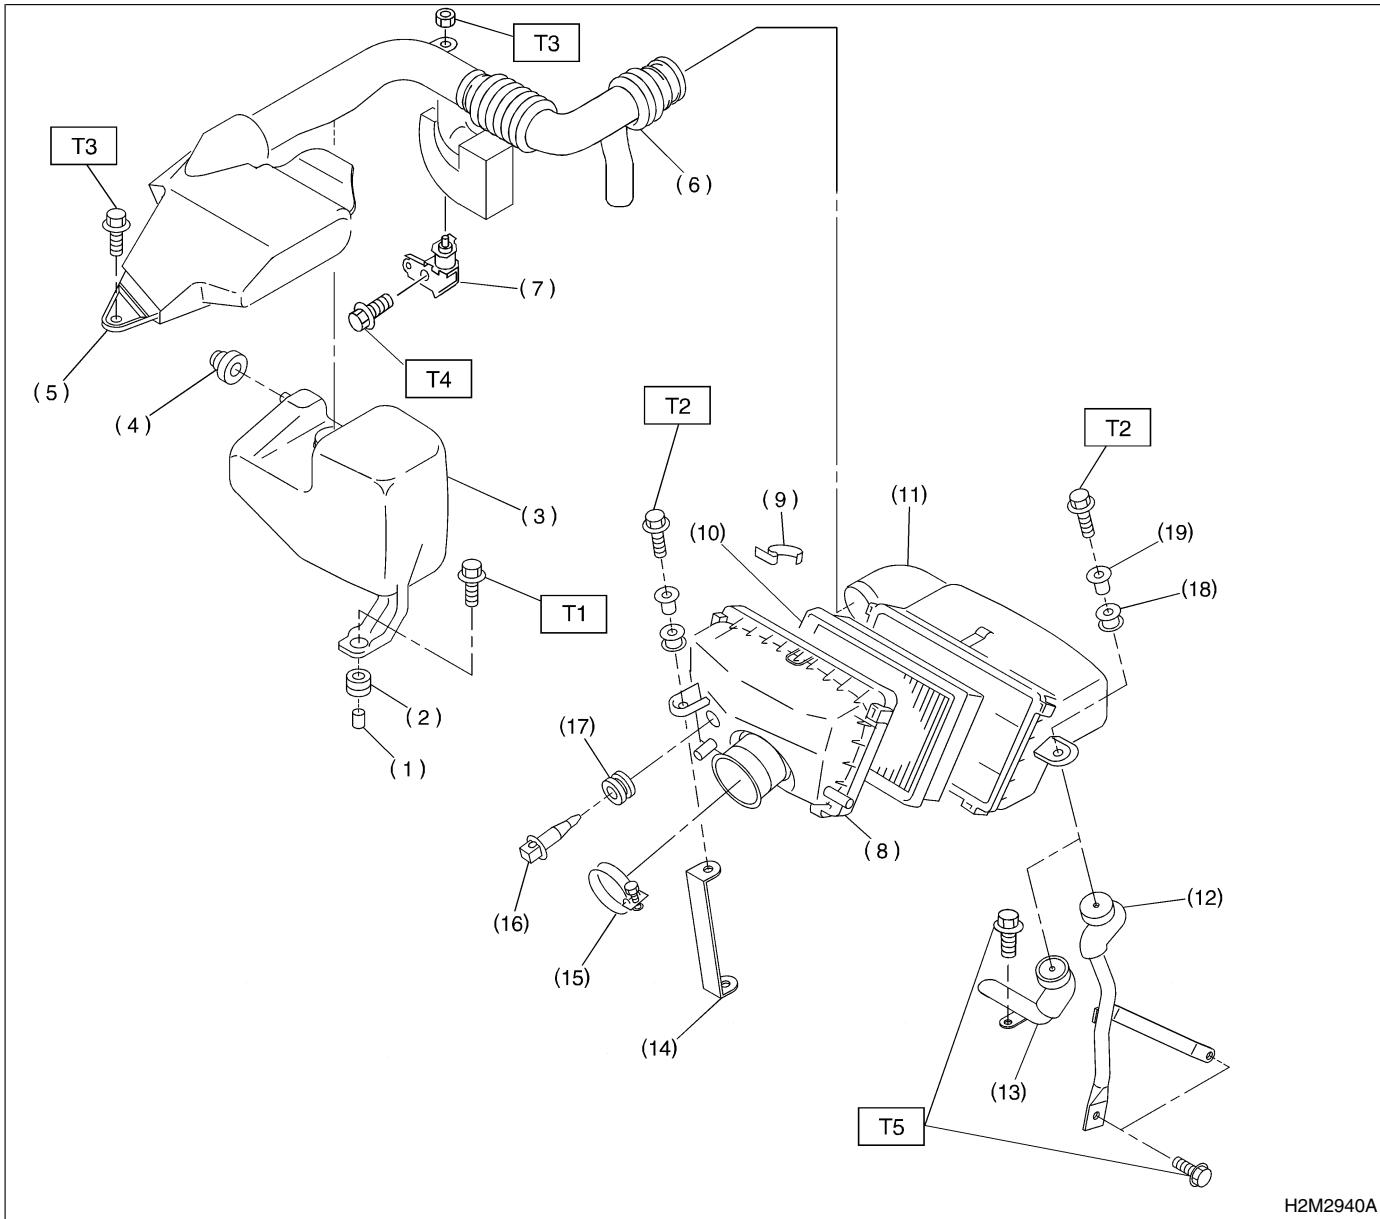

- (1) Spacer
- (2) Bush
- (3) Air chamber
- (4) Cushion rubber
- (5) Air intake duct A
- (6) Air intake duct B
- (7) Holder
- (8) Air cleaner case A
- (9) Clip
- (10) Air cleaner element

- (11) Air cleaner case B
- (12) Air cleaner case stay LH (MT vehicles)
- (13) Air cleaner case stay LH (AT vehicles)
- (14) Air cleaner case stay RH
- (15) Clamp
- (16) Intake air temperature sensor (2200 cc models)
- (17) Rubber holder (2200 cc models)

- (19) Bush
- (18) Spacer

Tightening torque: N·m (kgf·m, ft·lb)

- T1: 33 (3.4, 25)
- T2: 6.4 (0.65, 4.7)
- T3: 7.4 (0.75, 5.4)
- T4: 14 (1.4, 10.1)
- T5: 16 (1.6, 11.6)

B: CAUTION S104001A03

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensor or units, be sure to disconnect negative terminal from battery.