

5. Engine Lubrication System

Trouble in General S108100

A: INSPECTION S108100A10

Before troubleshooting, make sure that the engine oil level is correct and no oil leakage exists.

Trouble	Possible cause		Corrective action
1. Warning light remains on.	1) Oil pressure switch failure	Cracked diaphragm or oil leakage within switch	Replace.
		Broken spring or seized contacts	Replace.
	2) Low oil pressure	Clogged oil filter	Replace.
		Malfunction of oil by-pass valve of oil filter	Clean or replace.
		Malfunction of oil relief valve of oil pump	Clean or replace.
		Clogged oil passage	Clean.
	3) No oil pressure	Excessive tip clearance and side clearance of oil pump rotor and gear	Replace.
		Clogged oil strainer or broken pipe	Clean or replace.
		Insufficient engine oil	Replenish.
2. Warning light does not go on.	Broken pipe of oil strainer	Replace.	
	Stuck oil pump rotor	Replace.	
	1) Burn-out bulb	Replace.	
3. Warning light flickers momentarily.	2) Poor contact of switch contact points	Replace.	
	3) Disconnection of wiring	Repair.	
	1) Poor contact at terminals	Repair.	
	2) Defective wiring harness	Repair.	
	3) Low oil pressure	Check for the same possible causes as listed in 1.—2)	

MEMO: