


11. Belt Cover S103582

A: REMOVAL S103582A18

- 1) Remove belt cover (LH).
- 2) Remove front belt cover.

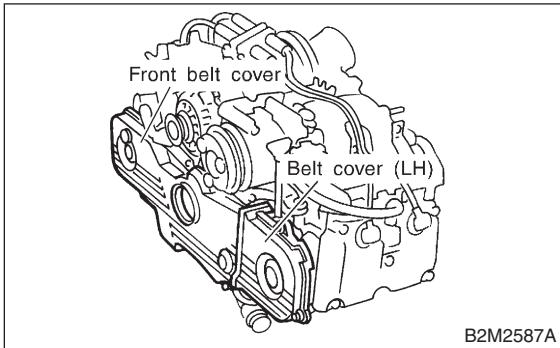

B: INSTALLATION S103582A11

- 1) Install front belt cover.


Tightening torque:

5 N·m (0.5 kgf-m, 3.6 ft-lb)

- 2) Install belt cover (LH).

Tightening torque:

5 N·m (0.5 kgf-m, 3.6 ft-lb)

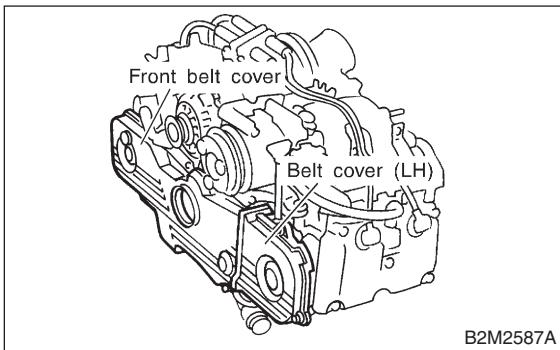

C: INSPECTION S103582A10

Make sure the cover is not damaged.