

## 7. Engine Mounting S103085

### A: REMOVAL S103085A18

- 1) Remove engine assembly. <Ref. to ME-34 REMOVAL, Engine Assembly.>
- 2) Remove engine mounting from engine assembly.

### B: INSTALLATION S103085A11

Install in the reverse order of removal.

***Tightening torque:***

***Engine mounting;***

***34 N·m (3.5 kgf-m, 25.3 ft-lb)***

### C: INSPECTION S103085A10

Make sure there are no cracks or other damage.