

## 4. Ignition Timing S103086

### A: INSPECTION S103086A10

#### CAUTION:


After warming-up, engine becomes very hot.  
Be careful not to burn yourself during measurement.

- 1) Warm-up the engine.
- 2) To check the ignition timing, connect a timing light to #1 cylinder spark plug cord, and illuminate the timing mark with the timing light.
- 3) Start the engine at idle speed and check the ignition timing.

**Ignition timing [BTDC/rpm]:**

**$10^{\circ}\pm8^{\circ}/650$  (MT model)**

**$15^{\circ}\pm8^{\circ}/700$  (AT model)**

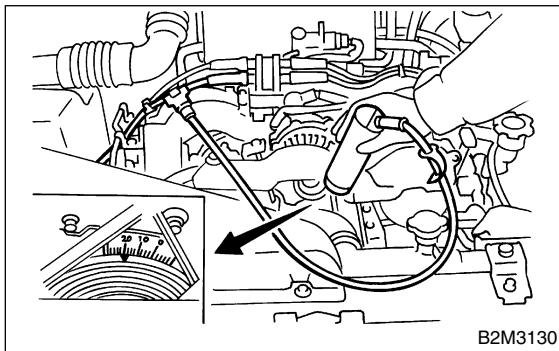

If the timing is not correct, check the ignition control system.

Refer to "EN" section. <Ref. to EN-2 PROCEDURE, Basic Diagnostic Procedure.>