


5. Spark Plugs SA07683

A: REPLACEMENT SA07683A20

- 1) Remove intake duct and intake chamber.
- 2) Remove washer tank and put it aside.
- 3) Disconnect spark plug cord.
- 4) Remove spark plug with a plug-wrench.

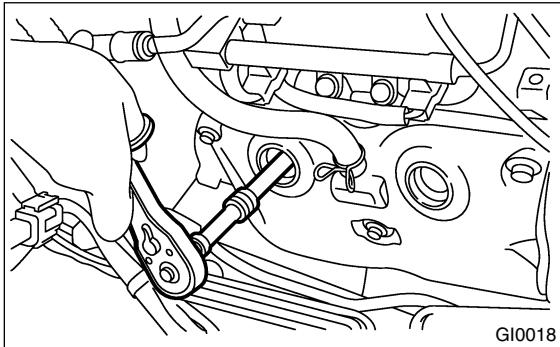

- 5) Set new spark plug.

Recommended spark plug:

CHAMPION RC10YC4

CHAMPION RC8YC4

NGK BKR6E-11

NIPPONDENSO K20PR-U11

Spark plug gap

1.0 — 1.1 mm (0.039 — 0.043 in)

- 6) Tighten spark plug lightly with hand, and then secure with a plug-wrench to the specified torque.

Tightening torque:

20.6 N·m (2.10 kgf-m, 15.19 ft-lb)

NOTE:

- Be sure to place the gasket between the cylinder head and spark plug.
- If torque wrench is not available, tighten spark plug until gasket contacts cylinder head; then tighten further 1/4 to 1/2 turns.