

15. Transmission Oil SA07691


A: REPLACEMENT SA07691A20

1. MANUAL TRANSMISSION SA07691A2001

- 1) Drain gear oil by removing drain plug after allowing the engine to cool for 3 to 4 hours.

NOTE:

Before starting work, cool off the engine well.

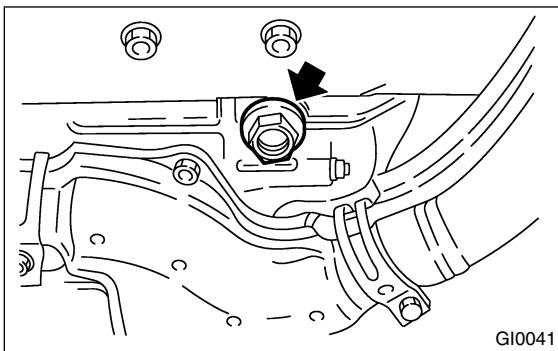

- 2) Reinstall drain plug after draining gear oil and tighten it to the specified torque.

Tightening torque:

44 N·m (4.5 kgf·m, 32.5 ft-lb)

NOTE:

- Be sure to place a gasket between the transmission case and drain plug.
- Replace the gasket with a new one.
- Each oil manufacturer has its base oil and additives. Thus, do not mix two or more brands.

- 3) Fill transmission gear oil through the oil level gauge hole up to the upper point of level gauge.

Gear oil capacity:

3.5 ℥ (3.7 US qt, 3.1 Imp qt)

