



3. Driver's Airbag Module S802307

A: CAUTION S802307A03


- The airbag module must not be disassembled. The airbag module cannot be used again once inflated.

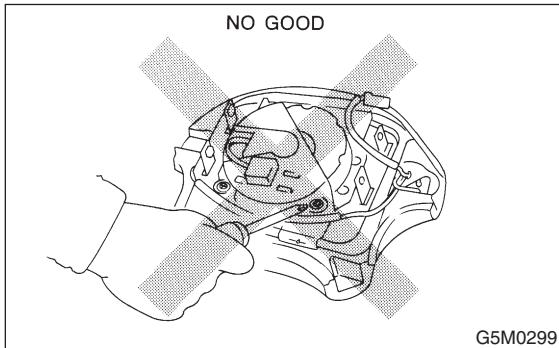


- When removing and installing the airbag module, the operator should stand, as much as possible, on the side of the airbag module.

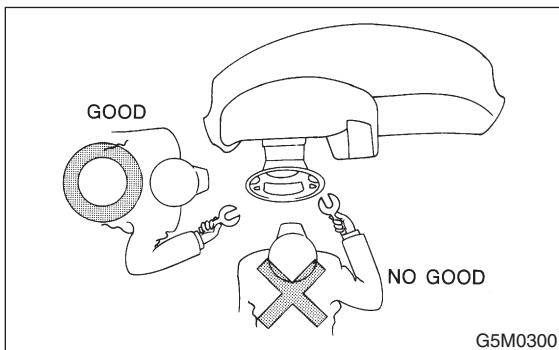

- After removal, the airbag module should be kept away from heat and light sources, and stored on a clean, flat surface to prevent from any damage to its lower structure.

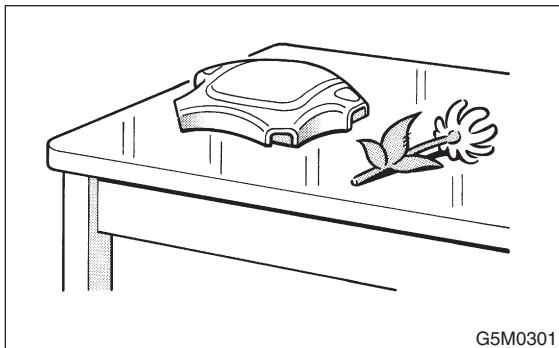

- Do not check airbag module continuity with airbag removed from the vehicle body.

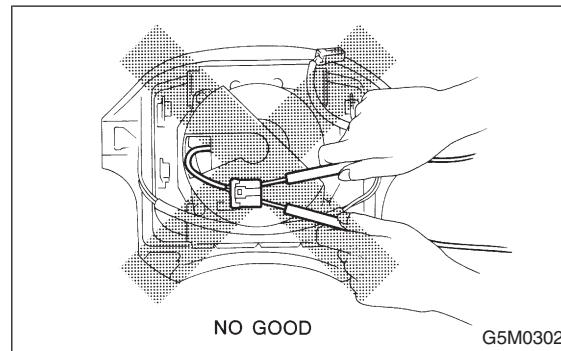


- Replace airbag module with a new one, should any of the following conditions develop:
 - Pad surface is scratched or cracked.
 - Connector harness is damaged.
 - Inflator side structure of module is cracked or deformed.
 - Module is excessively stained with water, oil, etc.
 - Module was accidentally dropped.

DRIVER'S AIRBAG MODULE

Airbag System


- When storing a removed airbag module, be sure to place it in parallel with floor with the pad facing up. Do not place it against a wall, or place anything on the pad; otherwise, a dangerous condition may be created if the module malfunctions.

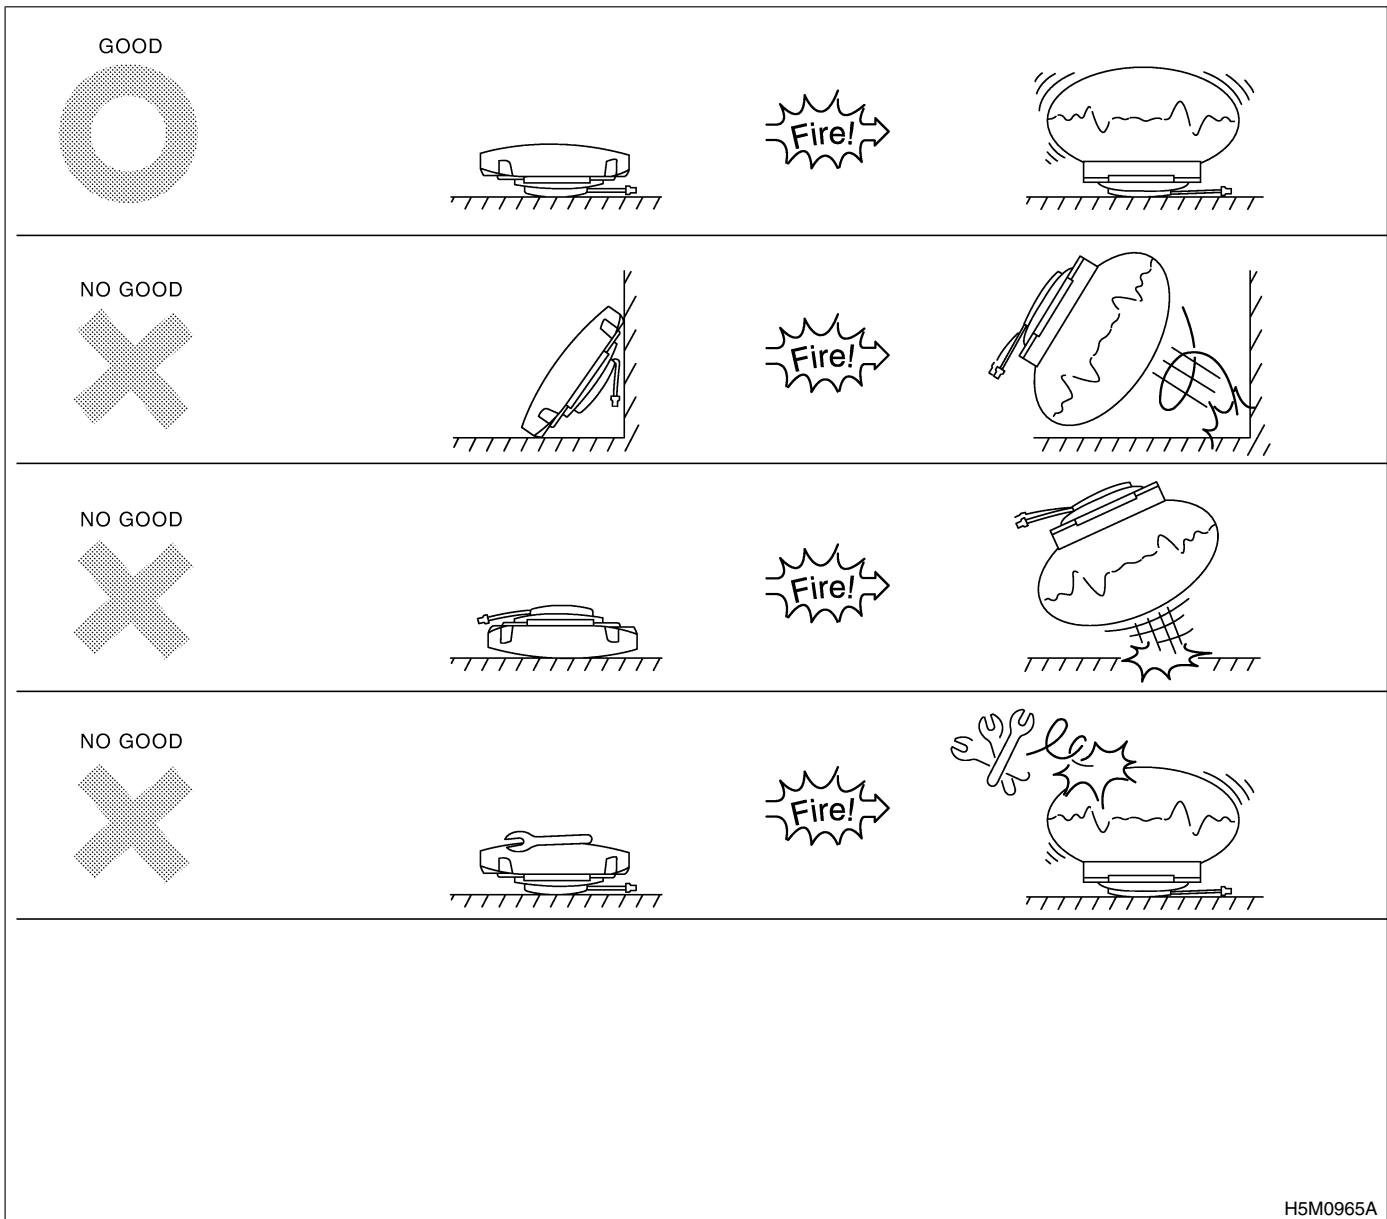


H5M0965A

B: REMOVAL S802307A18

- 1) Set front wheels in straight ahead position.
- 2) Turn ignition switch off.
- 3) Disconnect ground cable from battery and wait for at least 20 seconds before starting work.
- 4) Using TORX® BIT T30, remove two TORX® bolts.

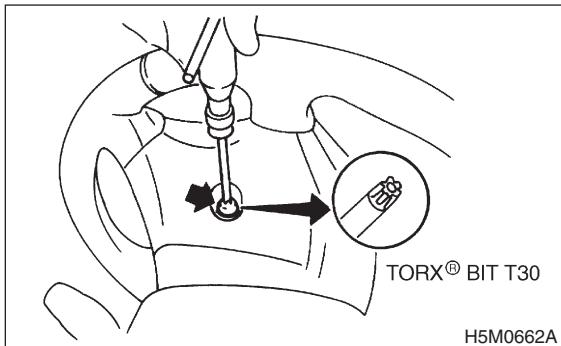

- 5) Disconnect airbag connector on back of airbag module.

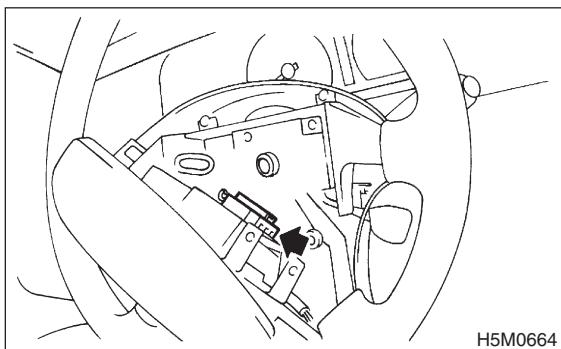

- 6) Refer to "CAUTION:" for handling of a removed airbag module. <Ref. to AB-7 CAUTION, Driver's Airbag Module.>

C: INSTALLATION S802307A11

Install in the reverse order of removal.

CAUTION:

Do not allow harness and connectors to interfere or get caught with other parts.