

## 2. Front Seat Belt S801303

### A: REMOVAL S801303A18


#### WARNING:

Replace front seat belt worn by occupants of a vehicle that has been in a serious accident. The entire assembly should be replaced even if damage is not obvious.


### 1. OUTER BELT (SEDAN AND WAGON)

S801303A1803

- 1) Remove through-anchor cover cap.
- 2) Remove shoulder anchor bolt.
- 3) Remove webbing guide.

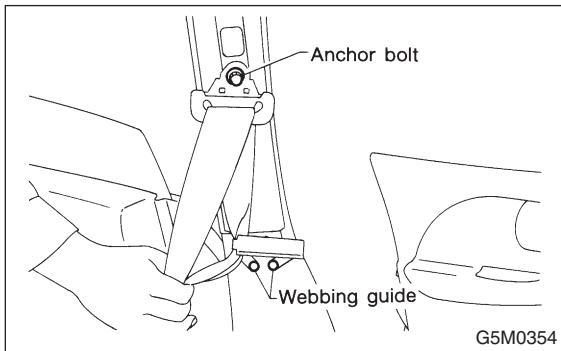


- 4) Remove center lower pillar trim panel.
- 5) Remove front cover side plate.
- 6) Roll up floor mat at the bottom of center pillar.
- 7) Remove lap anchor bolt.

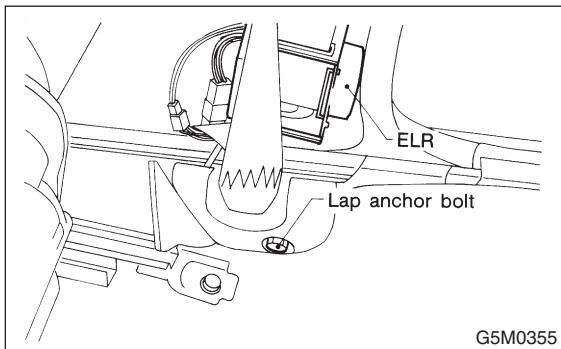



- 8) Remove belt retractor and outer belt.

### 2. OUTER BELT (COUPE) S801303A1804

- 1) Remove rear seat cushion and backrest.  
<Ref. to SE-7 REMOVAL, Rear Seat.>
- 2) Remove rear quarter trim.

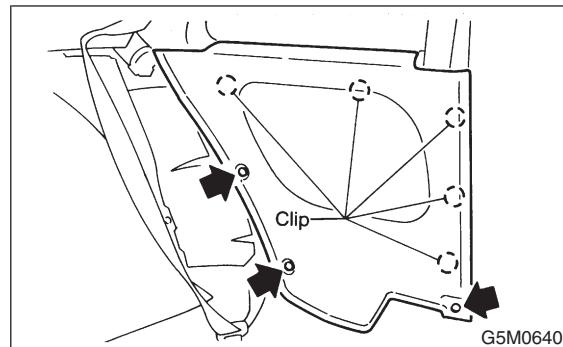

- 3) Remove webbing guide.

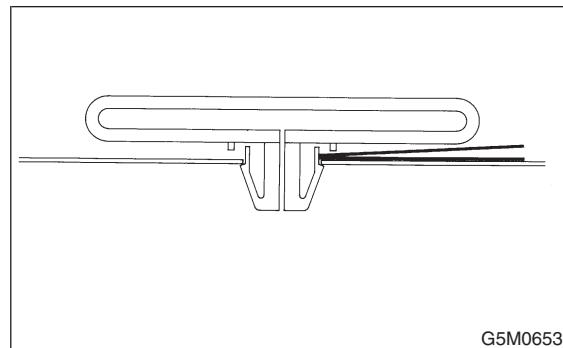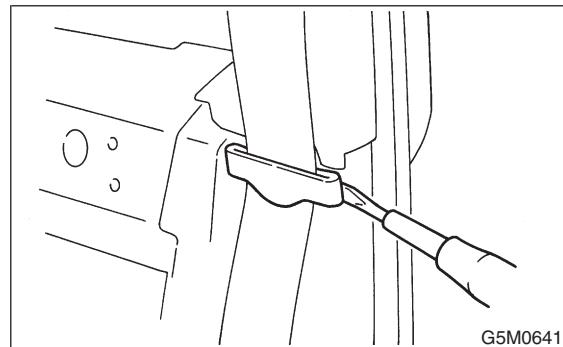


- 4) Remove anchor cover cap.
- 5) Remove four bolts and then belt retractor and outer belt.

# FRONT SEAT BELT

## Seat Belt System


### 3. INNER BELT S801303A1805

- 1) Disconnect connector.
- 2) Remove anchor bolt and then detach inner belt.

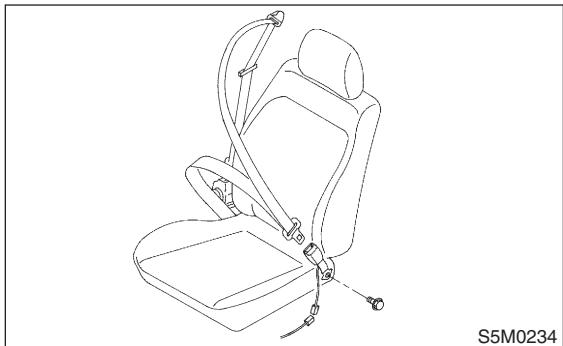

### 4. ADJUSTABLE SHOULDER ANCHOR S801303A1806

- 1) Remove shoulder anchor bolt.
- 2) Remove lower center pillar trim.
- 3) Remove front and front pillar trim panel.
- 4) Remove adjustable shoulder anchor assembly.

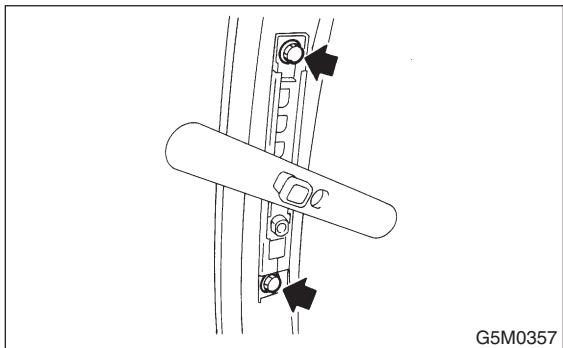

### B: INSTALLATION S801303A11

#### 1. OUTER BELT (SEDAN AND WAGON) S801303A1103

Install in the reverse order of removal.

##### CAUTION:


- The left and right ELR's are not mutually interchangeable because different sensors are used.
- Be careful not to twist belts during installation.

#### 2. OUTER BELT (COUPE) S801303A1104

Install in the reverse order of removal.

##### *Tightening torque:*

T1: 13 N·m (1.3 kgf-m, 9.4 ft-lb)  
T2: 35 N·m (3.6 kgf-m, 26 ft-lb)

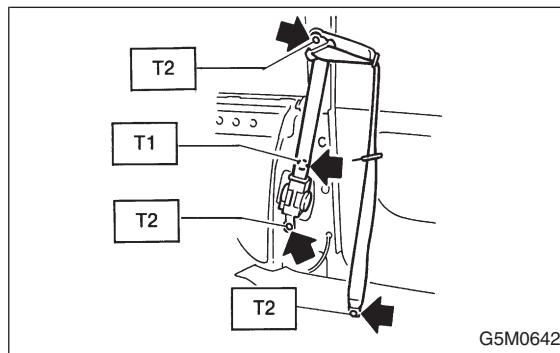

##### CAUTION:

- The left and right ELR's are not mutually interchangeable because different sensors are used.
- Be careful not to twist belts during installation.

#### 3. INNER BELT S801303A1105

Install in the reverse order of removal.

#### 4. ADJUSTABLE SHOULDER ANCHOR S801303A1106

Install in the reverse order of removal.

## C: INSPECTION

S801303A10

### 1. OUTER BELT

S801303A1003

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

### 2. INNER BELT

S801303A1004

Check for the following, and replace with new parts if necessary.

- Inner belt is deformed or damaged.
- Seat belt buckle is engaged improperly.