

7. Rear Crossmember

S201133


A: REMOVAL

S201133A18


CAUTION:

Do not subject ABS sensor harness to excessive tension (if equipped).

- 1) Separate front exhaust pipe and rear exhaust pipe.
- 2) Remove rear exhaust pipe and muffler.
- 3) Remove rear differential assembly. <Ref. to DI-23 REMOVAL, Rear Differential for T-type.> or <Ref. to DI-38 REMOVAL, Rear Differential for VA-type.>
- 4) Place transmission jack under rear crossmember.

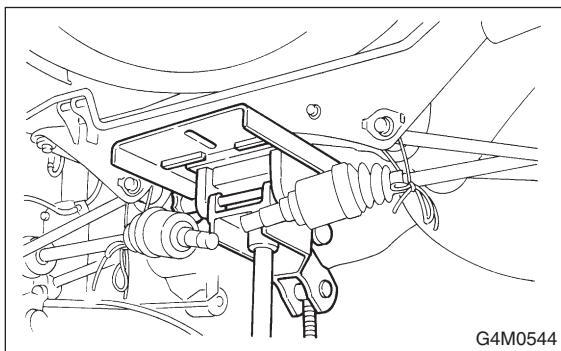

- 5) Remove bolts securing crossmember to vehicle body, and remove crossmember.

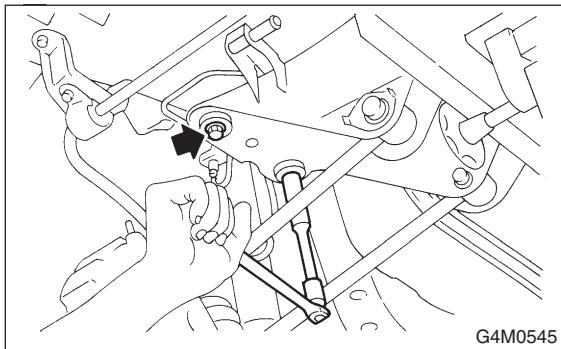

- 6) Scribe an alignment mark on rear lateral link cam bolt and crossmember.
- 7) Remove front and rear lateral links by loosening nuts.

B: INSTALLATION

S201133A11

- 1) Install in reverse order of removal.
- 2) Install rear differential assembly. <Ref. to DI-25 INSTALLATION, Rear Differential for T-type.> or <Ref. to DI-40 INSTALLATION, Rear Differential for VA-type.>
- 3) Always tighten rubber bushing location when wheels are in full contact with the ground and vehicle is curb weight.

NOTE:

Check wheel alignment and adjust if necessary.

C: INSPECTION

S201133A10

Check removed parts for wear, damage and cracks, and correct or replace if defective.